

13 611 60-64


exaktor




Bryt spänningen innan installation och vid ändringar på sensorinställningar.
Disconnect the mains before installation and changes of the sensor settings.
Kytke virta pois päältä ennen asennusta tai tunnistimen asetusten muuttamista.

Kopplingsschema/Wiring Diagram/Kytentäkaavio



13 611 60 - Puck Trailing Edge BTDA

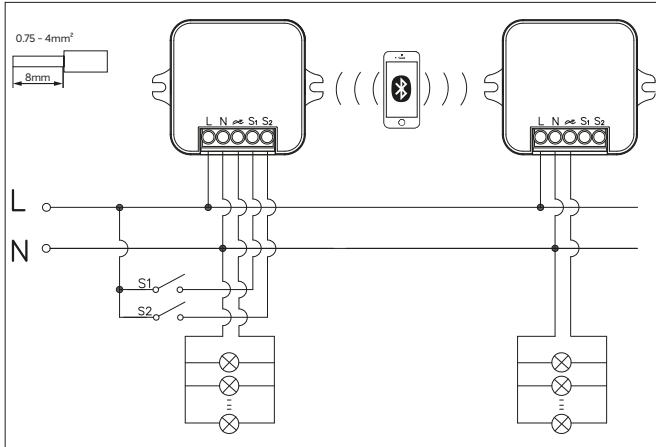


13 611 61 - Puck DALI2 BTDA

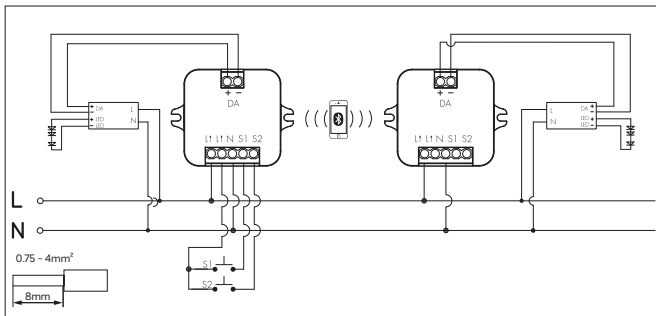


13 611 62 - Puck DALI till Trailing Edge

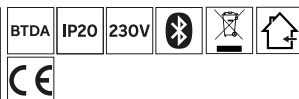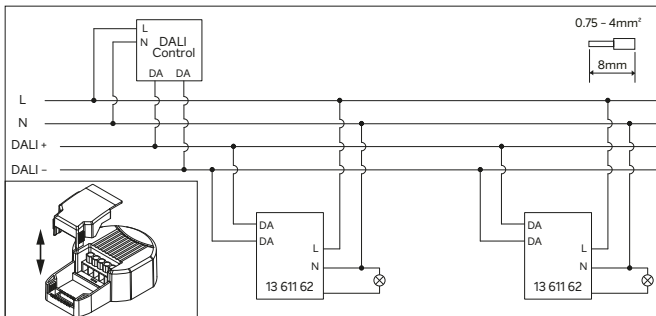


BTDA app

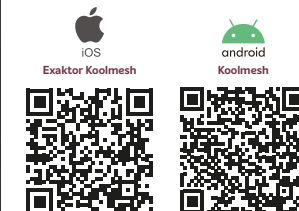


Måttkias/Mesurement/Mitat 13 611 60 - Puck Trailing Edge BTDA

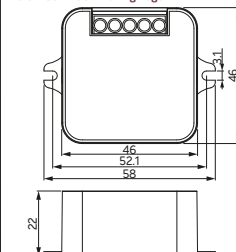

13 611 61 - Puck DALI2 BTDA

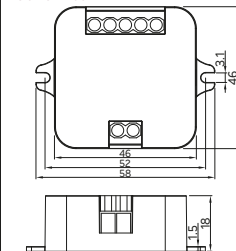


13 611 62 - Puck DALI till Trailing Edge

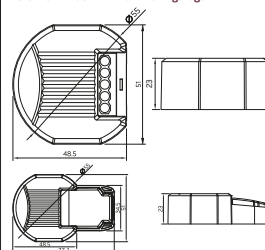


För mer information och manualer, skanna QR-koden!
For more information and manuals, scan the QR code!
Lisätietoja ja käyttöohjeita skannaamalla QR-koodi!






13 611 63 - Repeter RTC BTDA

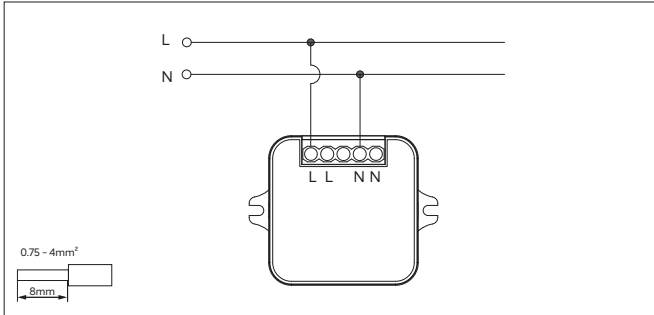


13 611 64 - Repeter m. Antenn RTC BTDA

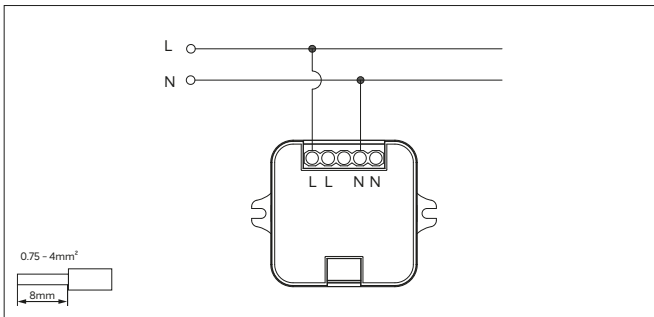

Återvinning/Recycling/Kierrätys

   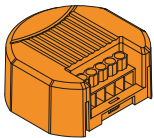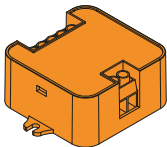

13 611 63 - Repeter RTC BTDA

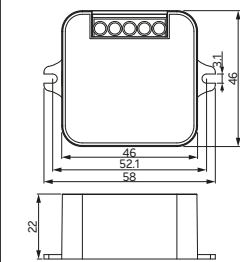

13 611 64 - Repeter m. Antenn RTC BTDA

