


Stratus Pendel BTDA

exakt^{or}




Bryt spänningen innan installation och ändringar av sensorinställningar.
Disconnect the mains before installation and changes of sensor settings.
Kytke virta pois päältä ennen asennusta tai tunnistimen asetusten muuttamista

Montage / Asennus / Installation

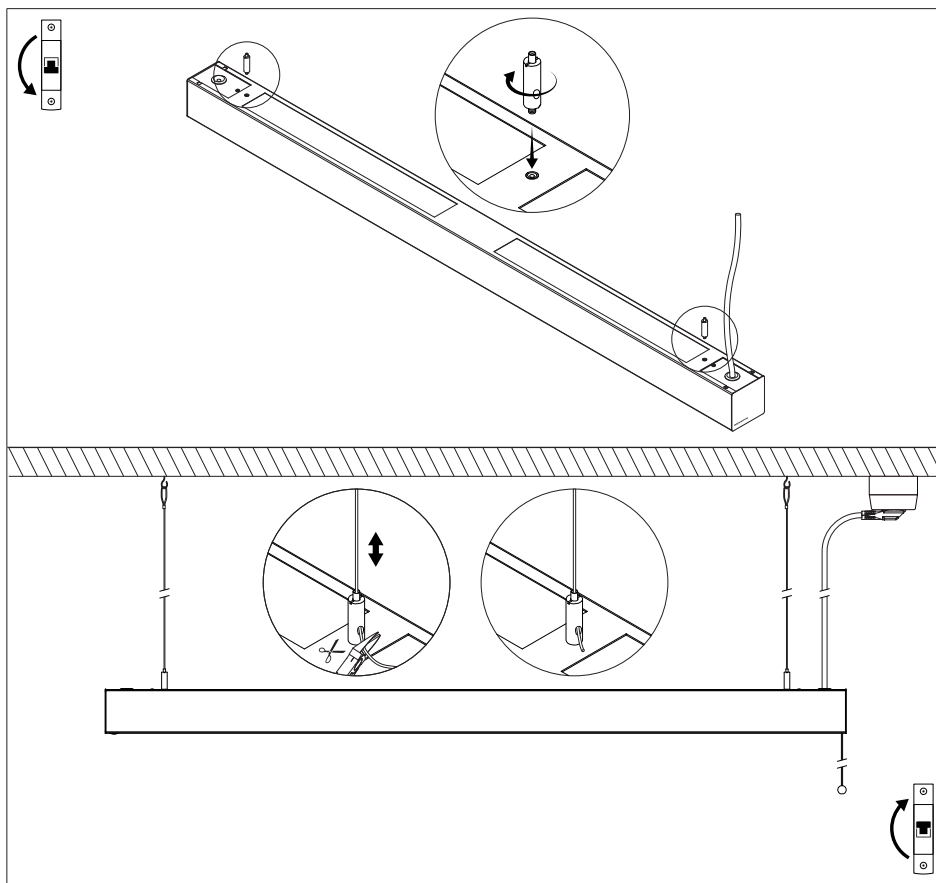


Inkoppling / KytKentä / Wiring

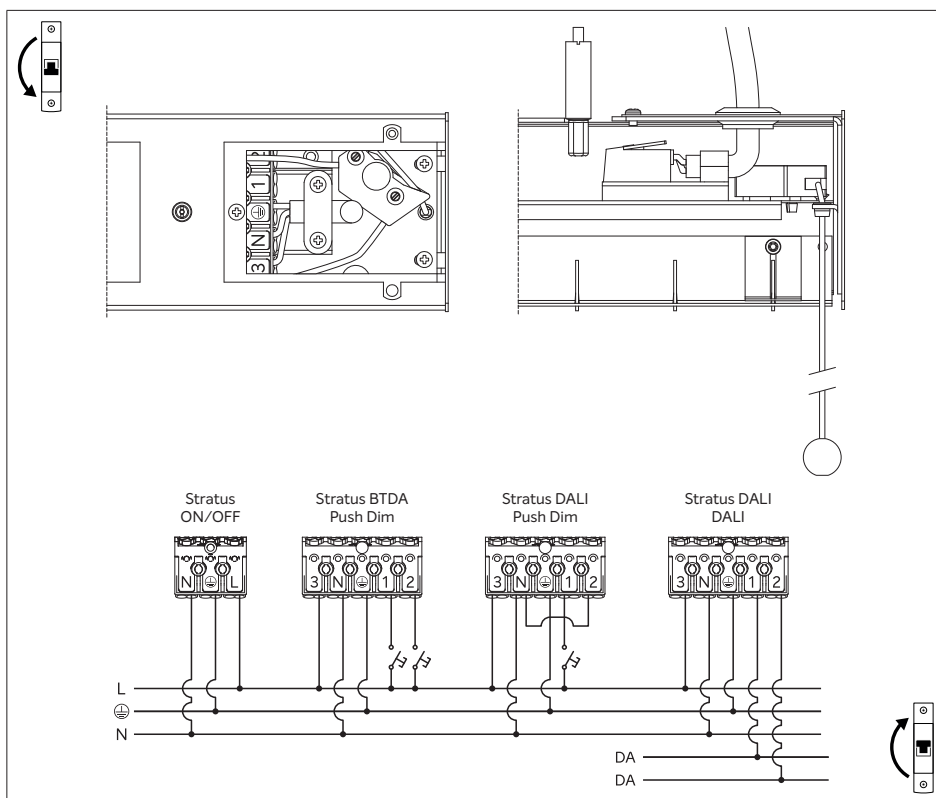


CE	230V 50-60Hz	Sensor PIR	Light Sensor	BTDA
LED	CRI >80	SDCM <3	DIM	DE

Måttskiss / Mitat / Size drawing

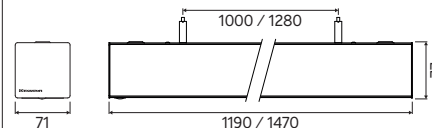

Utbytbarhet / VaihdeTTavuus / Replaceability

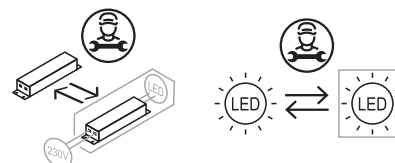

BTDA apps



För mer information och manualer, skanna QR-koden!
For more information and manuals, scan the QR code!
Lisätietoja ja käyttöohjeita skannaamalla QR-koodi!

Demontering / Dismantling / Purkaminen

