

# HangPro

## Versatile Adjustable Wire Hanger

**Suitable for hanging a variety of building services with ease, including ductwork, cable basket, lighting and displays.**

- **Easy Adjustment** - Even after the full load is applied, the hanger can still be adjusted
- **Patented Wire Entry Gate** - Guides the wire correctly, minimising the risk of improper installation
- **Traceable** - Each hanger comes with a unique batch number, ensuring quality and easy traceability
- **Safe** - Backed by extensive testing, offering industry-leading performance reassurance



## Product Specification

### Material

- Housing - Zinc Alloy (ZL2)
- Buttons - Nylon
- Wedge - Sintered Steel
- End Caps - Polypropylene
- Springs - Stainless Steel

### Compatibility

- Wire Diameter – 2.0 m
- Wire Nominal Tensile Strength – 1960 MPa  
For use only with 7 x 7 construction, Pre-Galvanised Class B Wire Rope, Manufactured to BS EN 12385
- Wire Construction – 7 x 7
- Maximum Inclusive Angle – 60°
- Minimum Tail Wire Length – 100mm
- Corrosion Classification – C1 indoor and C2 indoor

### Performance

Wire Diameter	Safe Working Load
2 mm	55 kg

- Safety Factor 5:1
- Operating Temperature Range -  
-20°C ~ +70°C / -4°F ~ +158°F


## Approvals

- Lloyd's Register - Independently witnessed and verified destructive pull testing.
- APAVE- Independently witnessed and verified destructive pull testing.
- TUV - Testing and product certification required from global organisation TÜV SÜD.
- ITB - Testing and certification required from the Polish Instytut Techniki Budowlanej.



**gripple.com**

## Design & Dimensions

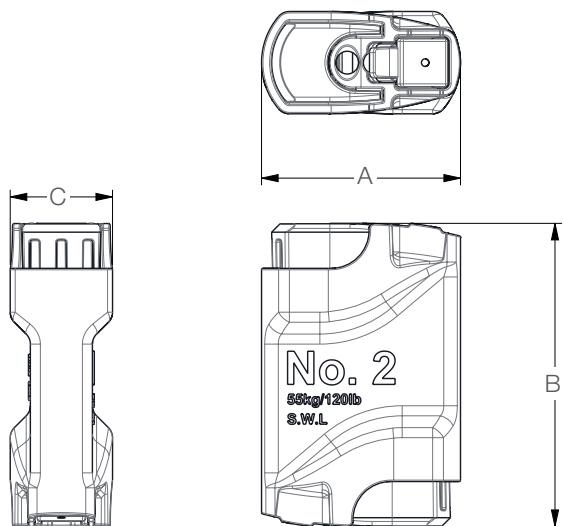


	mm
A	21 mm
B	32 mm
C	10.8 mm

## Packaging

- **Compatible End Fixings:** All standard end fixings are available, please refer to End Fixings on the Gripple website.
- **Wire Length:** Available in standard wire lengths 1 m - 10 m. Contact the Gripple Sales Team if alternate wire lengths are required.
- **Kit Contents:** Standard kits come with 10x HangPro and 10x wire with Factory Fitted End Fixings. Contractor Packs and Bulk options are available, please speak to the Gripple Sales Team.

## Installation

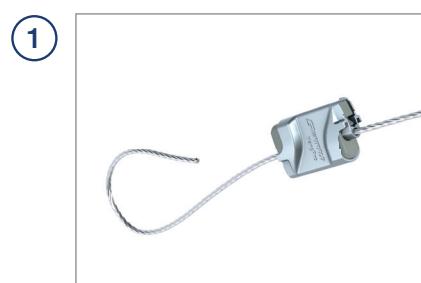

Insert the wire rope through insertion channel




Loop wire around the service and feed back through the opposite channel



The loop is now secure



To adjust, support the weight of the load, press one of the buttons to release the wire and make adjustments

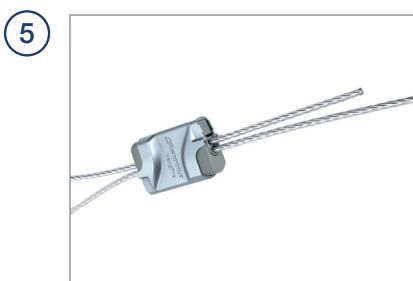

Ensure at least 100mm of tail wire exits the hanger

## Key Recommendations

Failure to comply with these recommendations may result in product malfunction and possible damage to property or person and will invalidate the Gripple guarantee. Gripple products are guaranteed to be free from defects in materials and workmanship in accordance with our terms and conditions. No other warranty, whether express or implied, including any warranty of merchantability or fitness for purpose shall exist in connection with the sale or use of any Gripple product.

Full technical information and installation instructions should be obtained directly from Gripple Limited, Gripple Europe, Gripple Inc., Gripple Japan, Gripple Poland, Gripple India, Gripple Germany, any regional Gripple office, or via our website [www.gripple.com](http://www.gripple.com).



### LOADS

Always operate the product within its stated safe working load range. Suspend static loads only. Do not subject to shock loading. Do not adjust under load.



### LIFTING

Do not use for lifting, either by crane or as part of a pulley system.



### IMPACT

If there is potential for impact on the wire rope suspension or suspended services, seek advice from Gripple Ltd. Technical Services prior to installation.



### HANGING AT AN ANGLE TO VERTICAL

Ensure that the load calculation considers the effect of 'side load'. For example, at an angle of 60° to vertical the SWL is effectively reduced by 50%.



### DUCTING

When installing included angle teardrop hangers on round/spiral ducting or pipes, the final included angle of the assembly should not exceed 60°.



### ENVIRONMENT

Do not use in chlorinated or chemically corrosive atmospheres. Standard hangers are for use in dry and air conditioned environments only. Stainless steel hangers should be considered for high to saturated humid environments after validation by a competent person.



### SWIMMING POOLS

Not suitable for swimming pools.



### TRACEABILITY

Always use the Gripple hanger with the specified wire rope supplied by Gripple. Gripple products should only be used with products supplied by Gripple Ltd., and the warranty will not apply if our products are used with any products supplied by third parties.



### LUBRICATION

Do not apply oil or any other lubricant to the hanger or any other part of the assembly.



### WIRE ROPE

Trim any damaged filaments with the wire cutter before use.



### INSTALLATION

Do not walk or stand on the Gripple product installation. Gripple products must not be used for personal suspension, fall protection or harnessing people.



### PAINTING

Do not paint the hanger prior to installation. Ensure the hanger is in its final position prior to applying any paint to the wire rope assembly. Do not move the fastener after painting.



### STORING

Do not store the product outdoors, or in damp or abnormal conditions.



### Y-FIT

Legs on Y-Fit not to be installed greater than 60°.



### REPAIR, MODIFICATION AND RE-USE

Do not repair, modify or re-use Gripple products. If you have any queries regarding product performance, please contact [TechnicalServices@gripple.com](mailto:TechnicalServices@gripple.com)



### JOINING

Never join two ends together in-line.