


Start och Stopp

Spistimern startas och stoppas genom intryckning av den grå startknappen **A**. Vid leverans är tidkretsen inställd på 30 minuter gångtid. Vill du ändra gångtiden till något av de övriga nio alternativen gör Du så här:

1. Lossa frontplattan med hjälp av en liten skruvmejsel **B**.
2. Flytta ryttaren – den lilla bygel – från dess position vid 30 minuter till den önskade nya gångtiden. Samtliga alternativ är tydligt markerade på tidkretsen **C**.
3. Montera frontplattan – Vid intryckning av startknappen visar nu displayen den nya gångtiden.

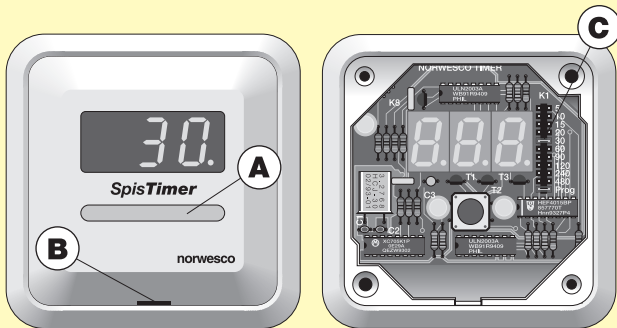

Inställning av individuellt vald gångtid

1. Stäng av timern så att displayen enbart visar en röd fast punkt i det nedre högra hörnet.
2. Tryck in startknappen och håll den intryckt i ca 8 sekunder till dess siffrorna i displayen börjar blinka.
3. Släpp upp knappen, och tryck omedelbart in den igen. Så länge knappen hålls intryckt bläddras nu siffrorna fram, med början vid en minut, till dess önskad gångtid visas i fönstret. Då fönstret visar rätt tid släpps startknappen och under ca 8 sekunder blinkar den inställda tiden varefter den automatiskt låses. (Ett litet knäpp hörs).

Tips:


Då frambläddringen av siffrorna sker ganska snabbt underlättas inställningen om knappen släpps upp då siffrorna närmar sig önskat värde, varefter den sista korrigeringen görs medelst upprepade intryckningar av startknappen. Varje intryckning stegar nu upp tiden med 1 min. Den programmerade tiden ligger nu kvar i minnet till dess omprogrammering sker eller strömavbrott inträffar. Efter strömavbrott aktiveras automatiskt den tid som motsvarar ryttarens placering på tidkretsen, vilket normalt är 30 minuter.

Norwesco AB · Box 603
SE-187 26 Täby · Sweden
Tel +46-8-792 27 00
Fax +46-8-792 27 09 • info@norwesco.se

Start and Stop

The cooker timer is started and stopped by pressing the grey start button **A**. Upon delivery, the delay for the timer is pre-set to 30 minutes. To manually change the delay to one of nine other settings:

1. Remove the front panel using a small screwdriver **B**.
2. Move the U-link from its position at 30 minutes to the desired delay setting. All settings are clearly marked on the timer circuit board **C**.
3. Refit the front panel. When the start button is pressed, the new delay setting will be shown on the display.

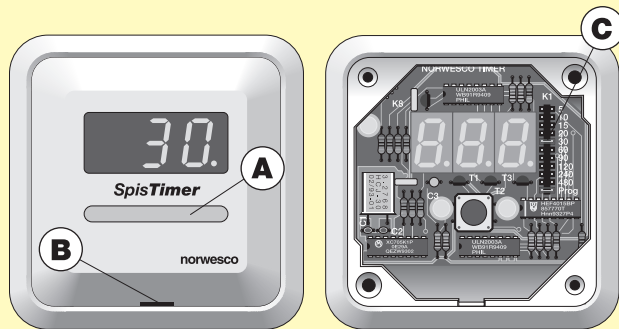

Programming alternative delay settings

1. Turn off the timer so that only a red dot is shown at the lower-right corner of the display.
2. Press the start button and hold it down for about 8 seconds, until the numbers on the display begin to blink.
3. Release the button and then immediately press it again. The numbers will count upwards for as long as the button is held down, beginning at one minute. When the desired delay is displayed, release the start button. The display will now blink for about 8 seconds before the delay is automatically set, as indicated by a low-volume acoustic signal.

Tip:

Because the numbers change rapidly when the button is held down, setting the delay is facilitated by releasing the button before the desired value is reached. You can now press the start button repeatedly until the correct delay is displayed. Each time you press the button, the delay increases by one minute. The programmed delay setting remains in the timer's memory until it is reprogrammed or power is interrupted. After a power interruption, the timer automatically reverts to the delay setting that corresponds to the position of the U-link, which is normally set to 30 minutes.

Norwesco AB · Box 603
SE-187 26 Täby · Sweden
Tel +46-8-792 27 00
Fax +46-8-792 27 09 • info@norwesco.se

www.norwesco.se
norwesco