




# Cabinet light Installation Instructions

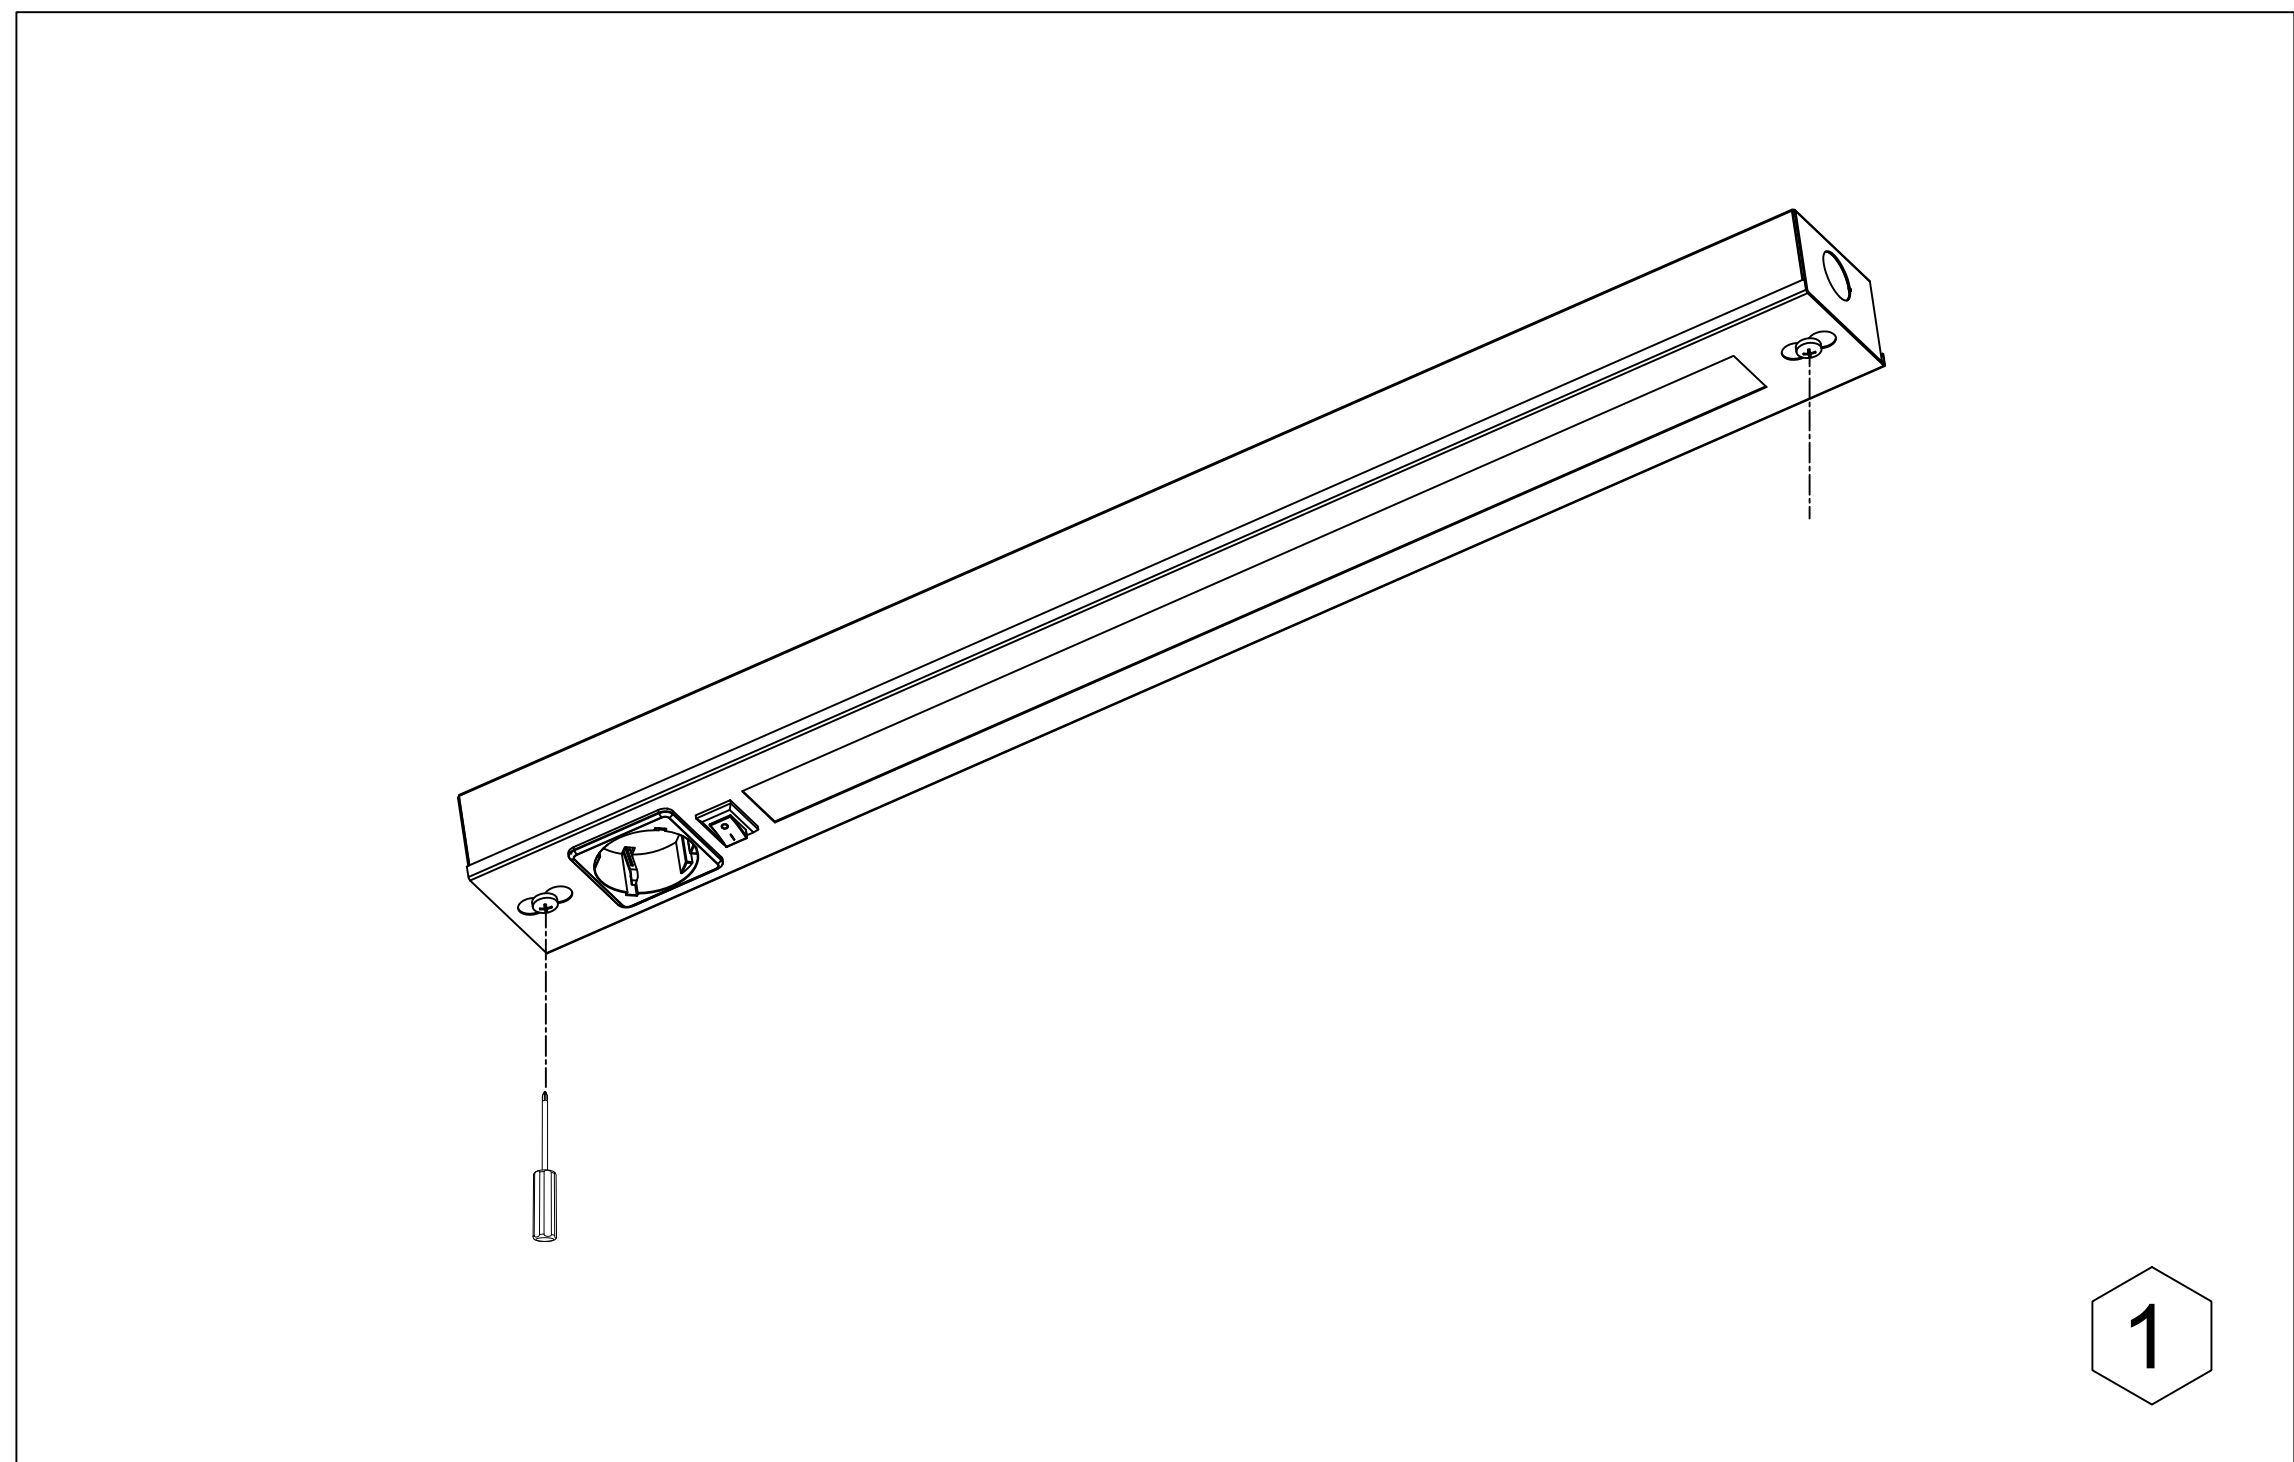


Loosen the screws at both ends by two turns with a screwdriver.

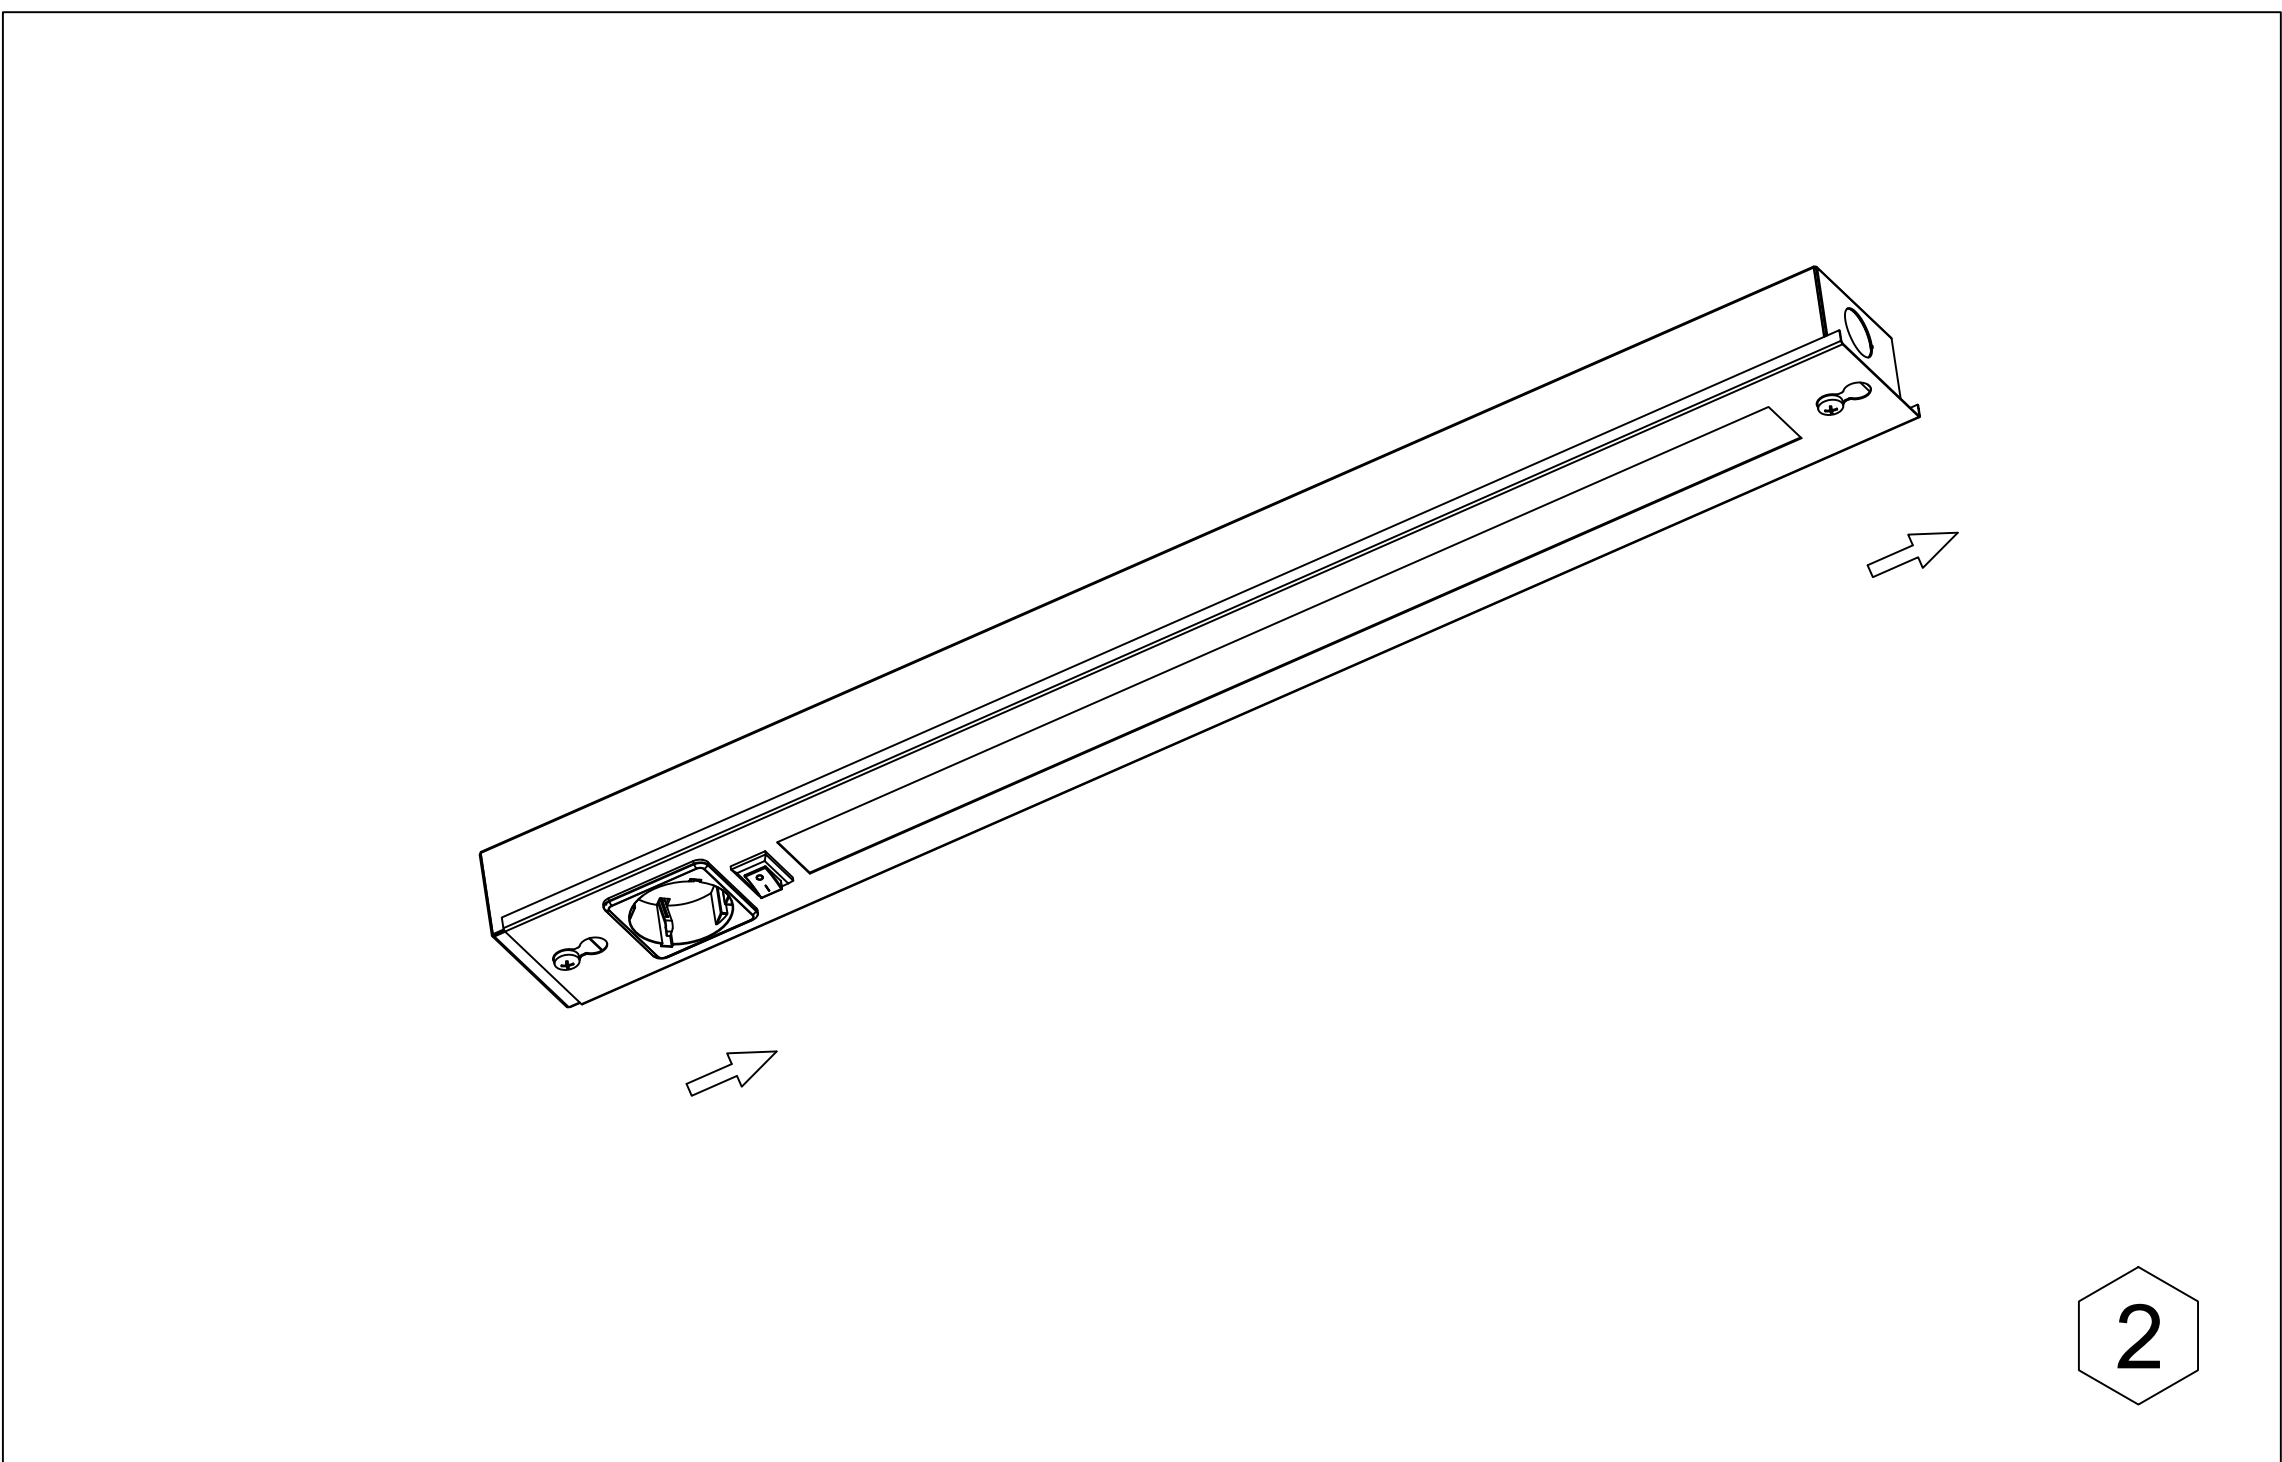


Push the lamp shade towards either end to make the screw heads fit into the holes.

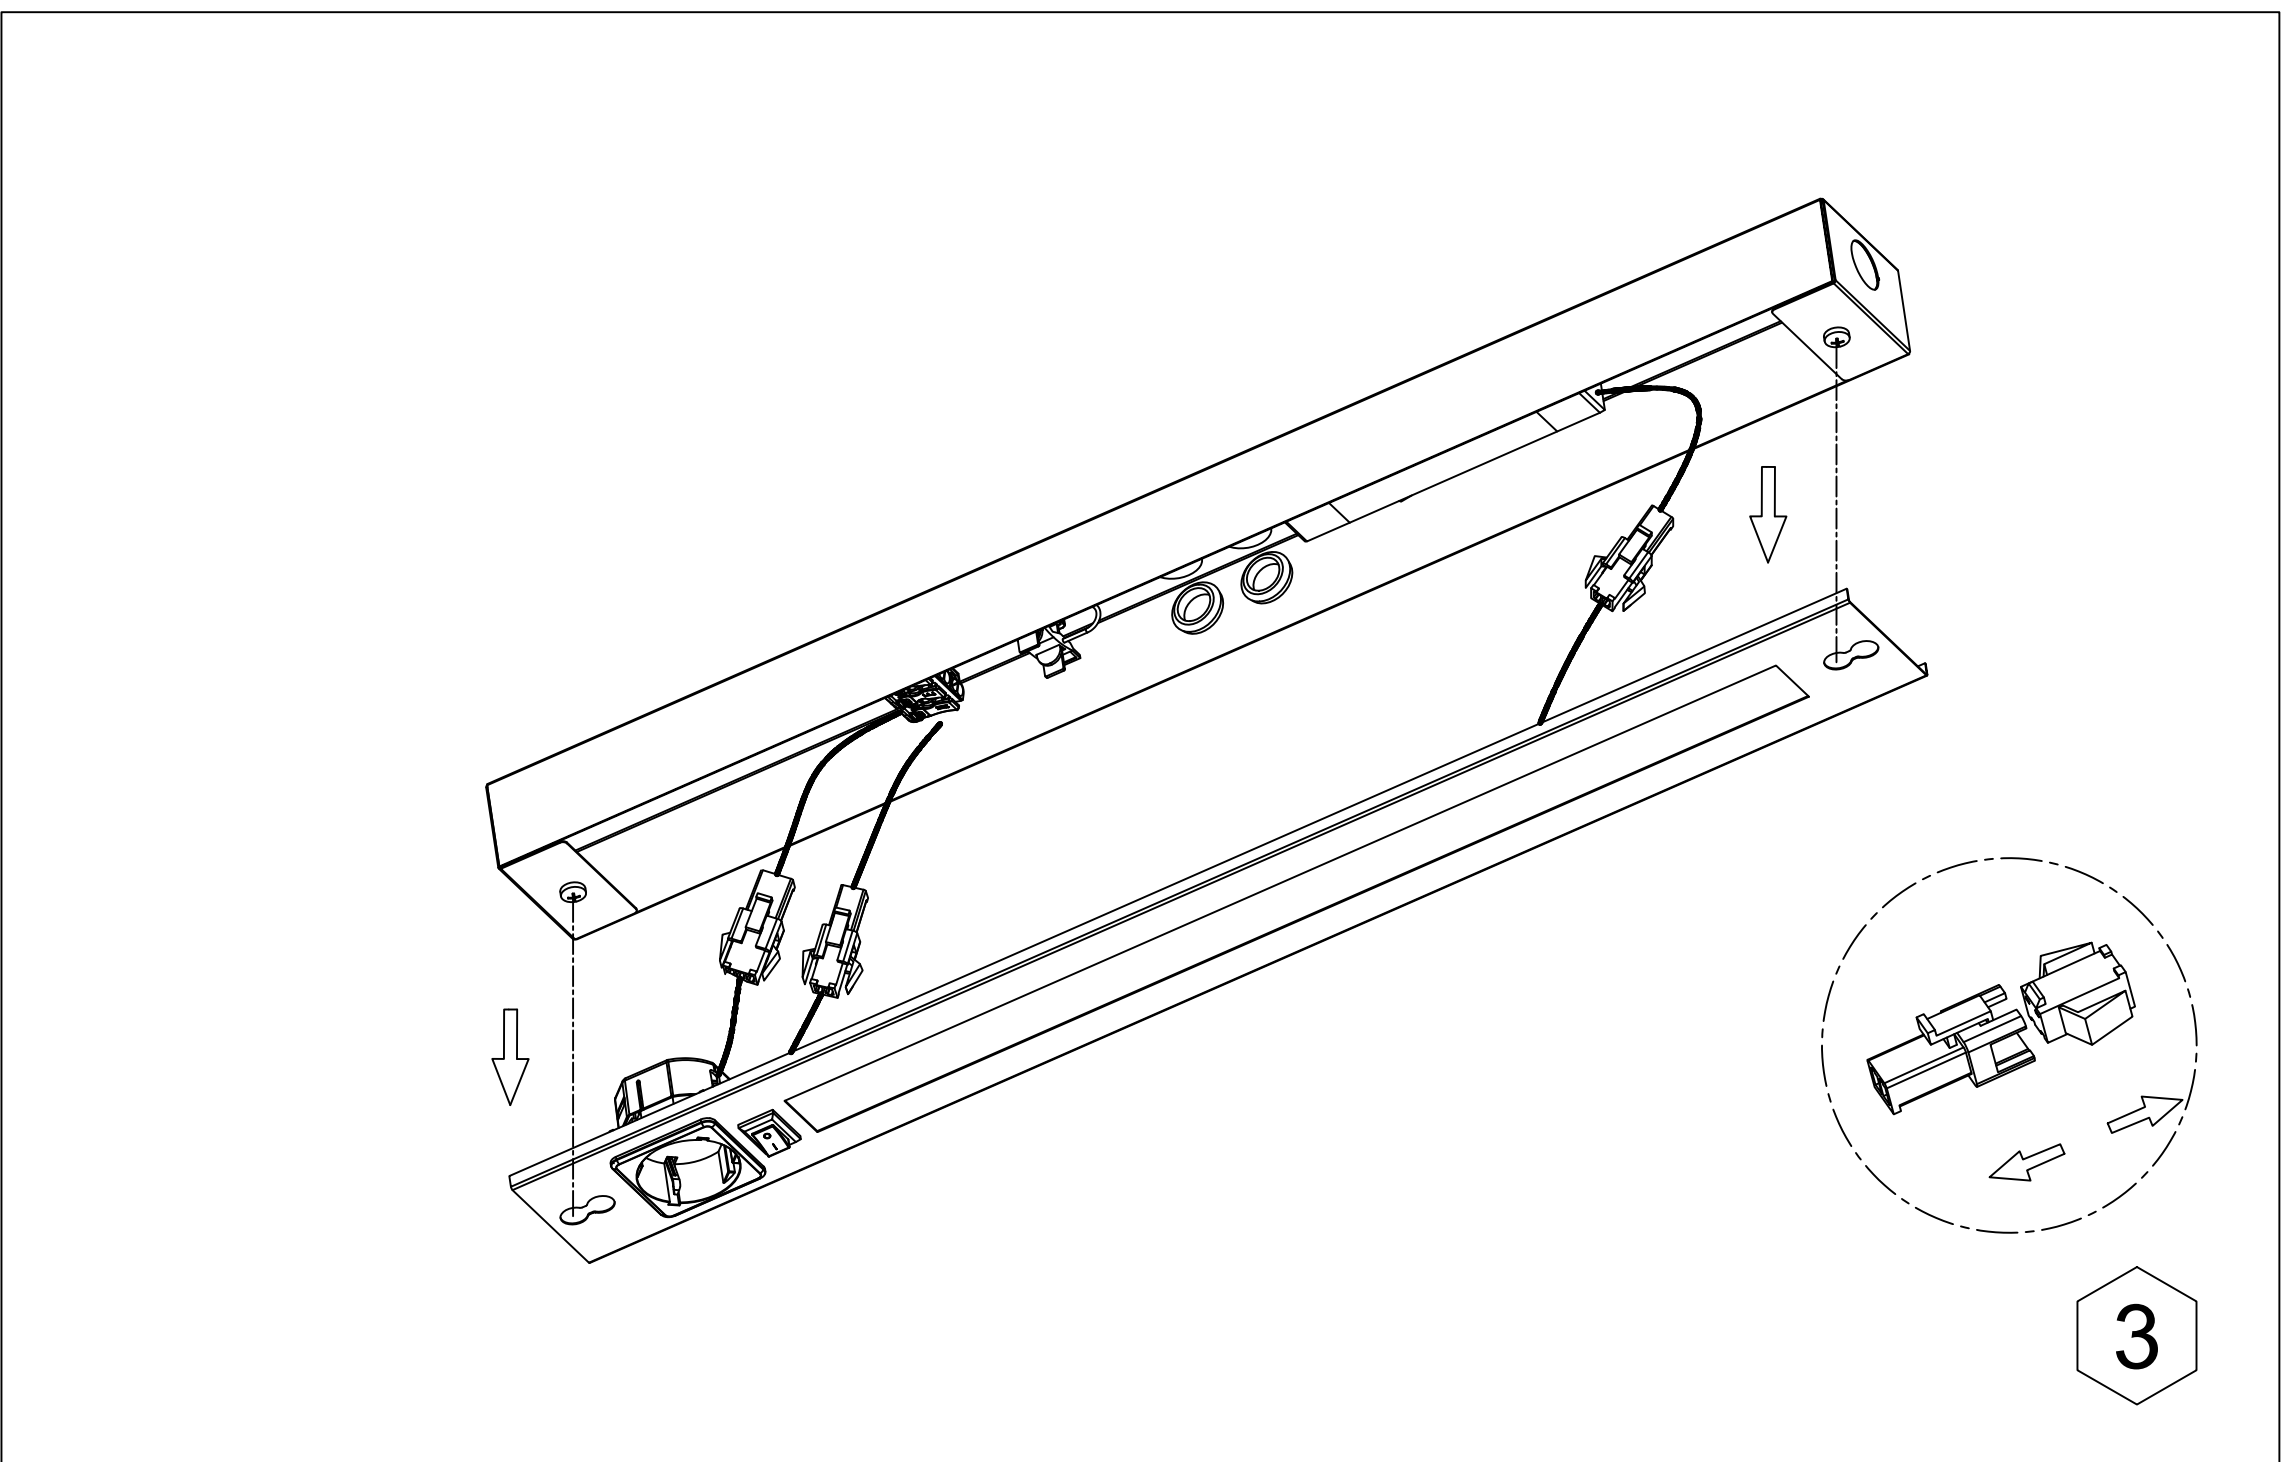


Remove the lamp shade and separate 3 pairs of connectors.

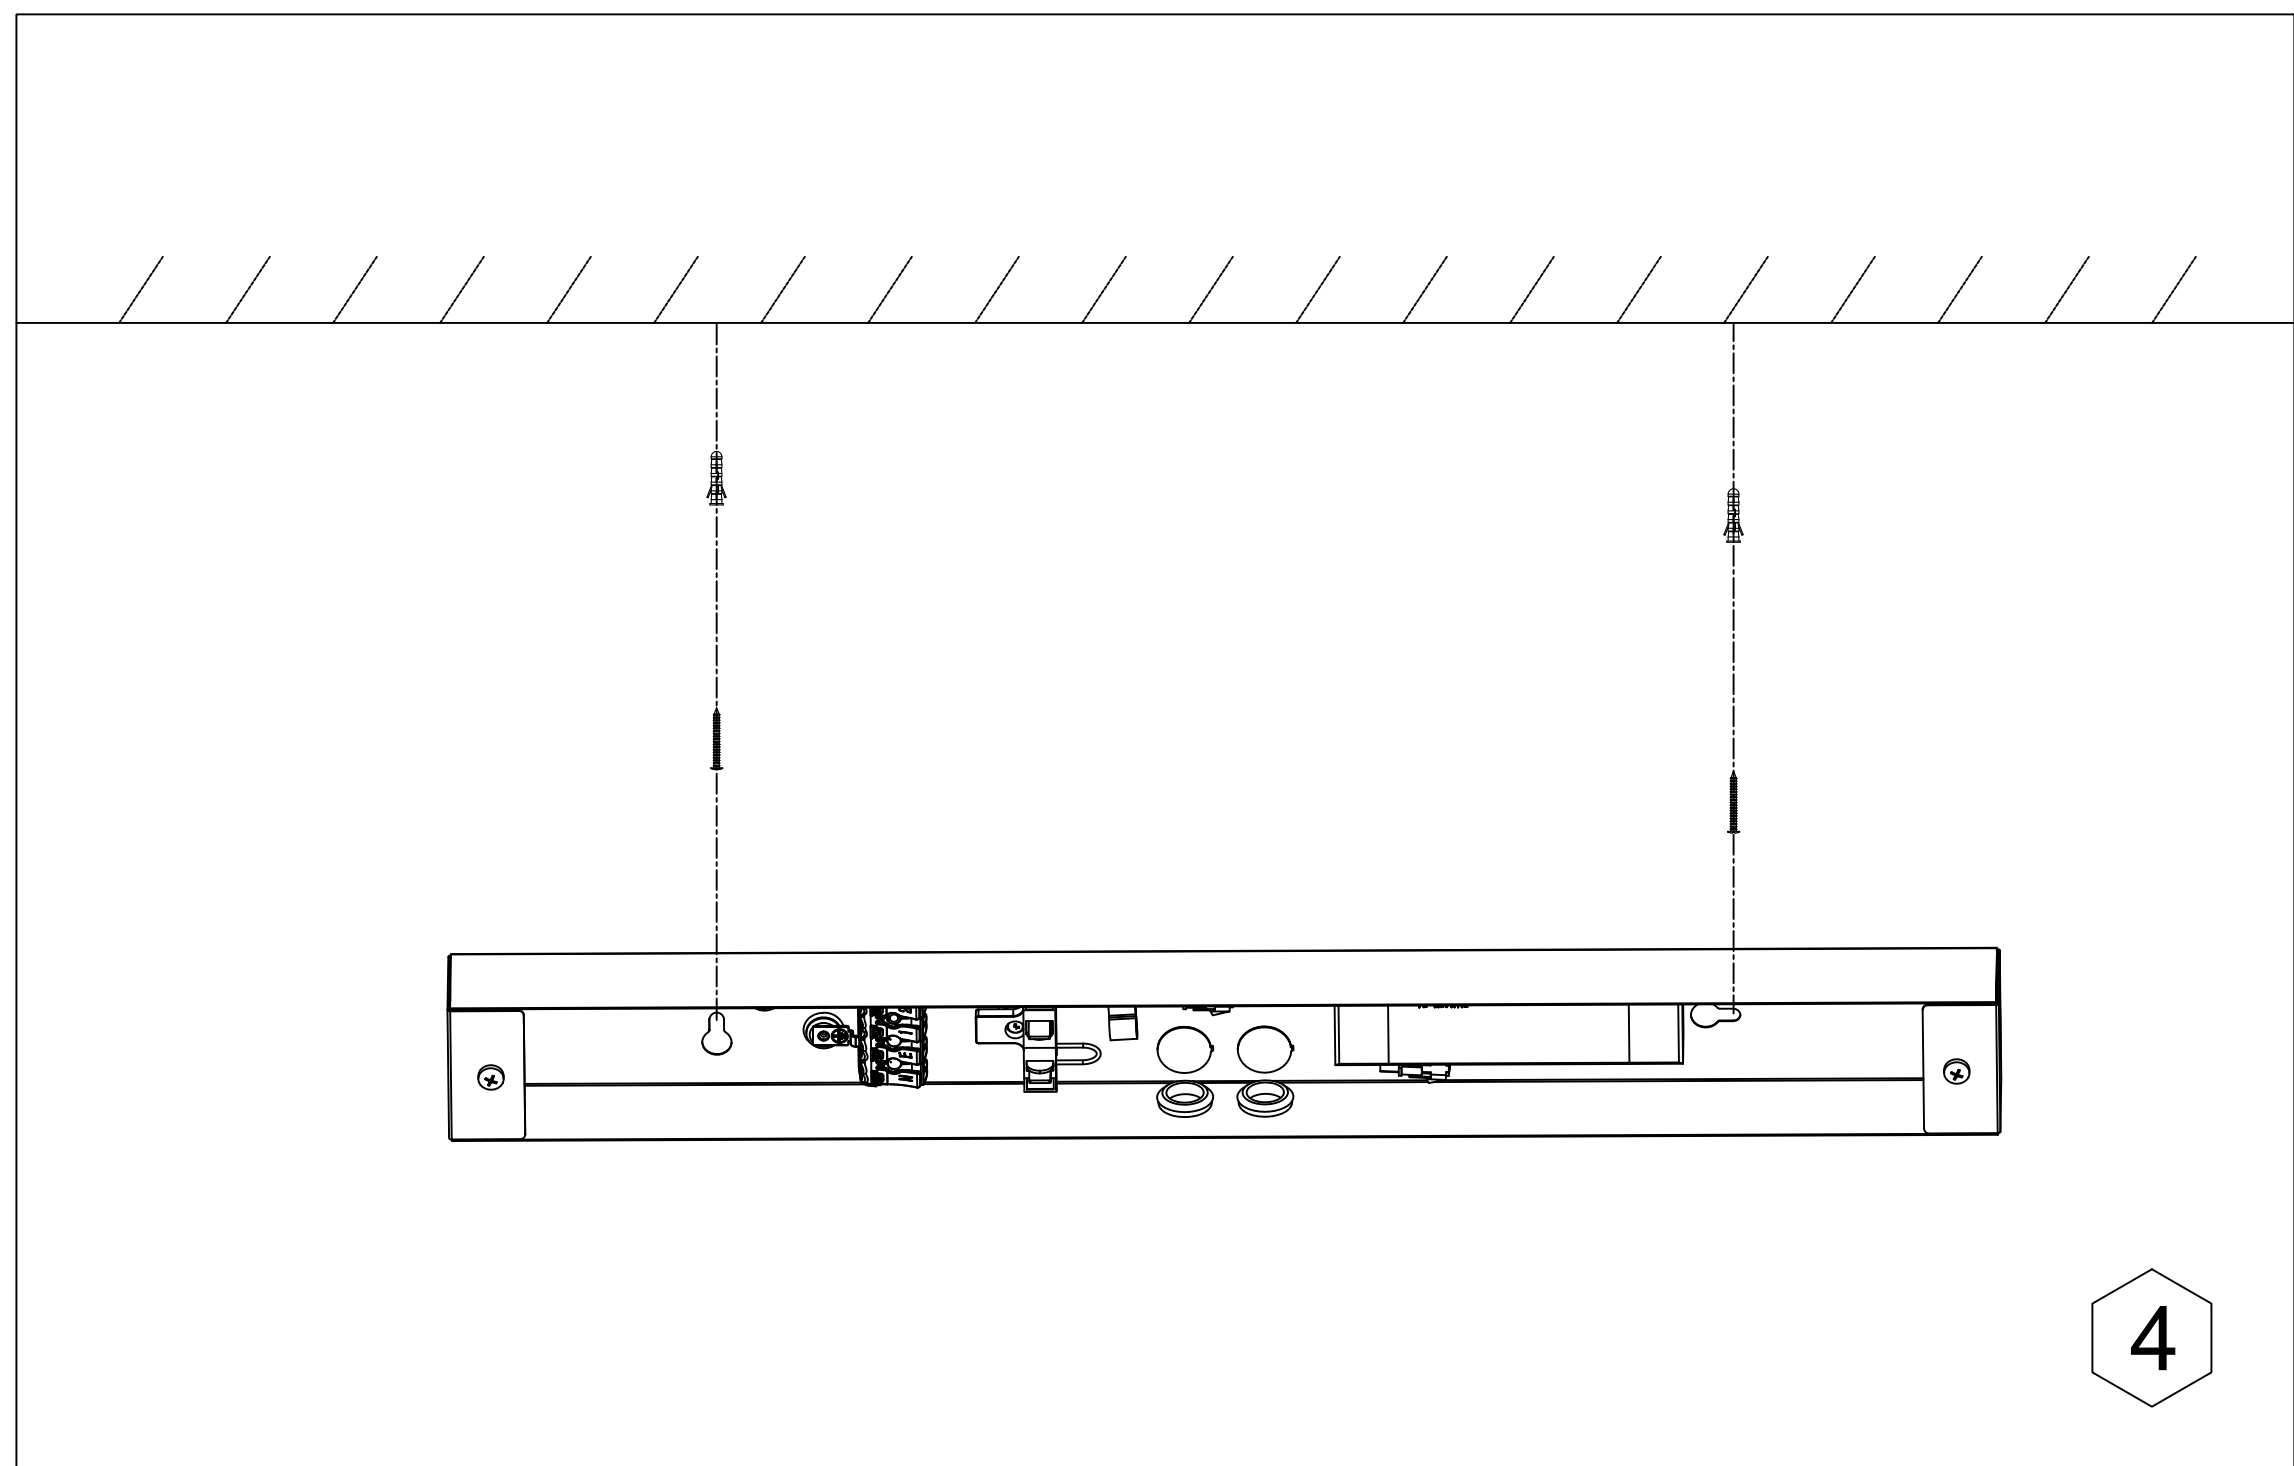


1. Locate and mark the installation positions.  
2. Use a drilling tool to drill a hole with a diameter of 6MM and a depth of 50MM.  
3. Knock the two screw plugs in the accessory package into the hole with a hammer.

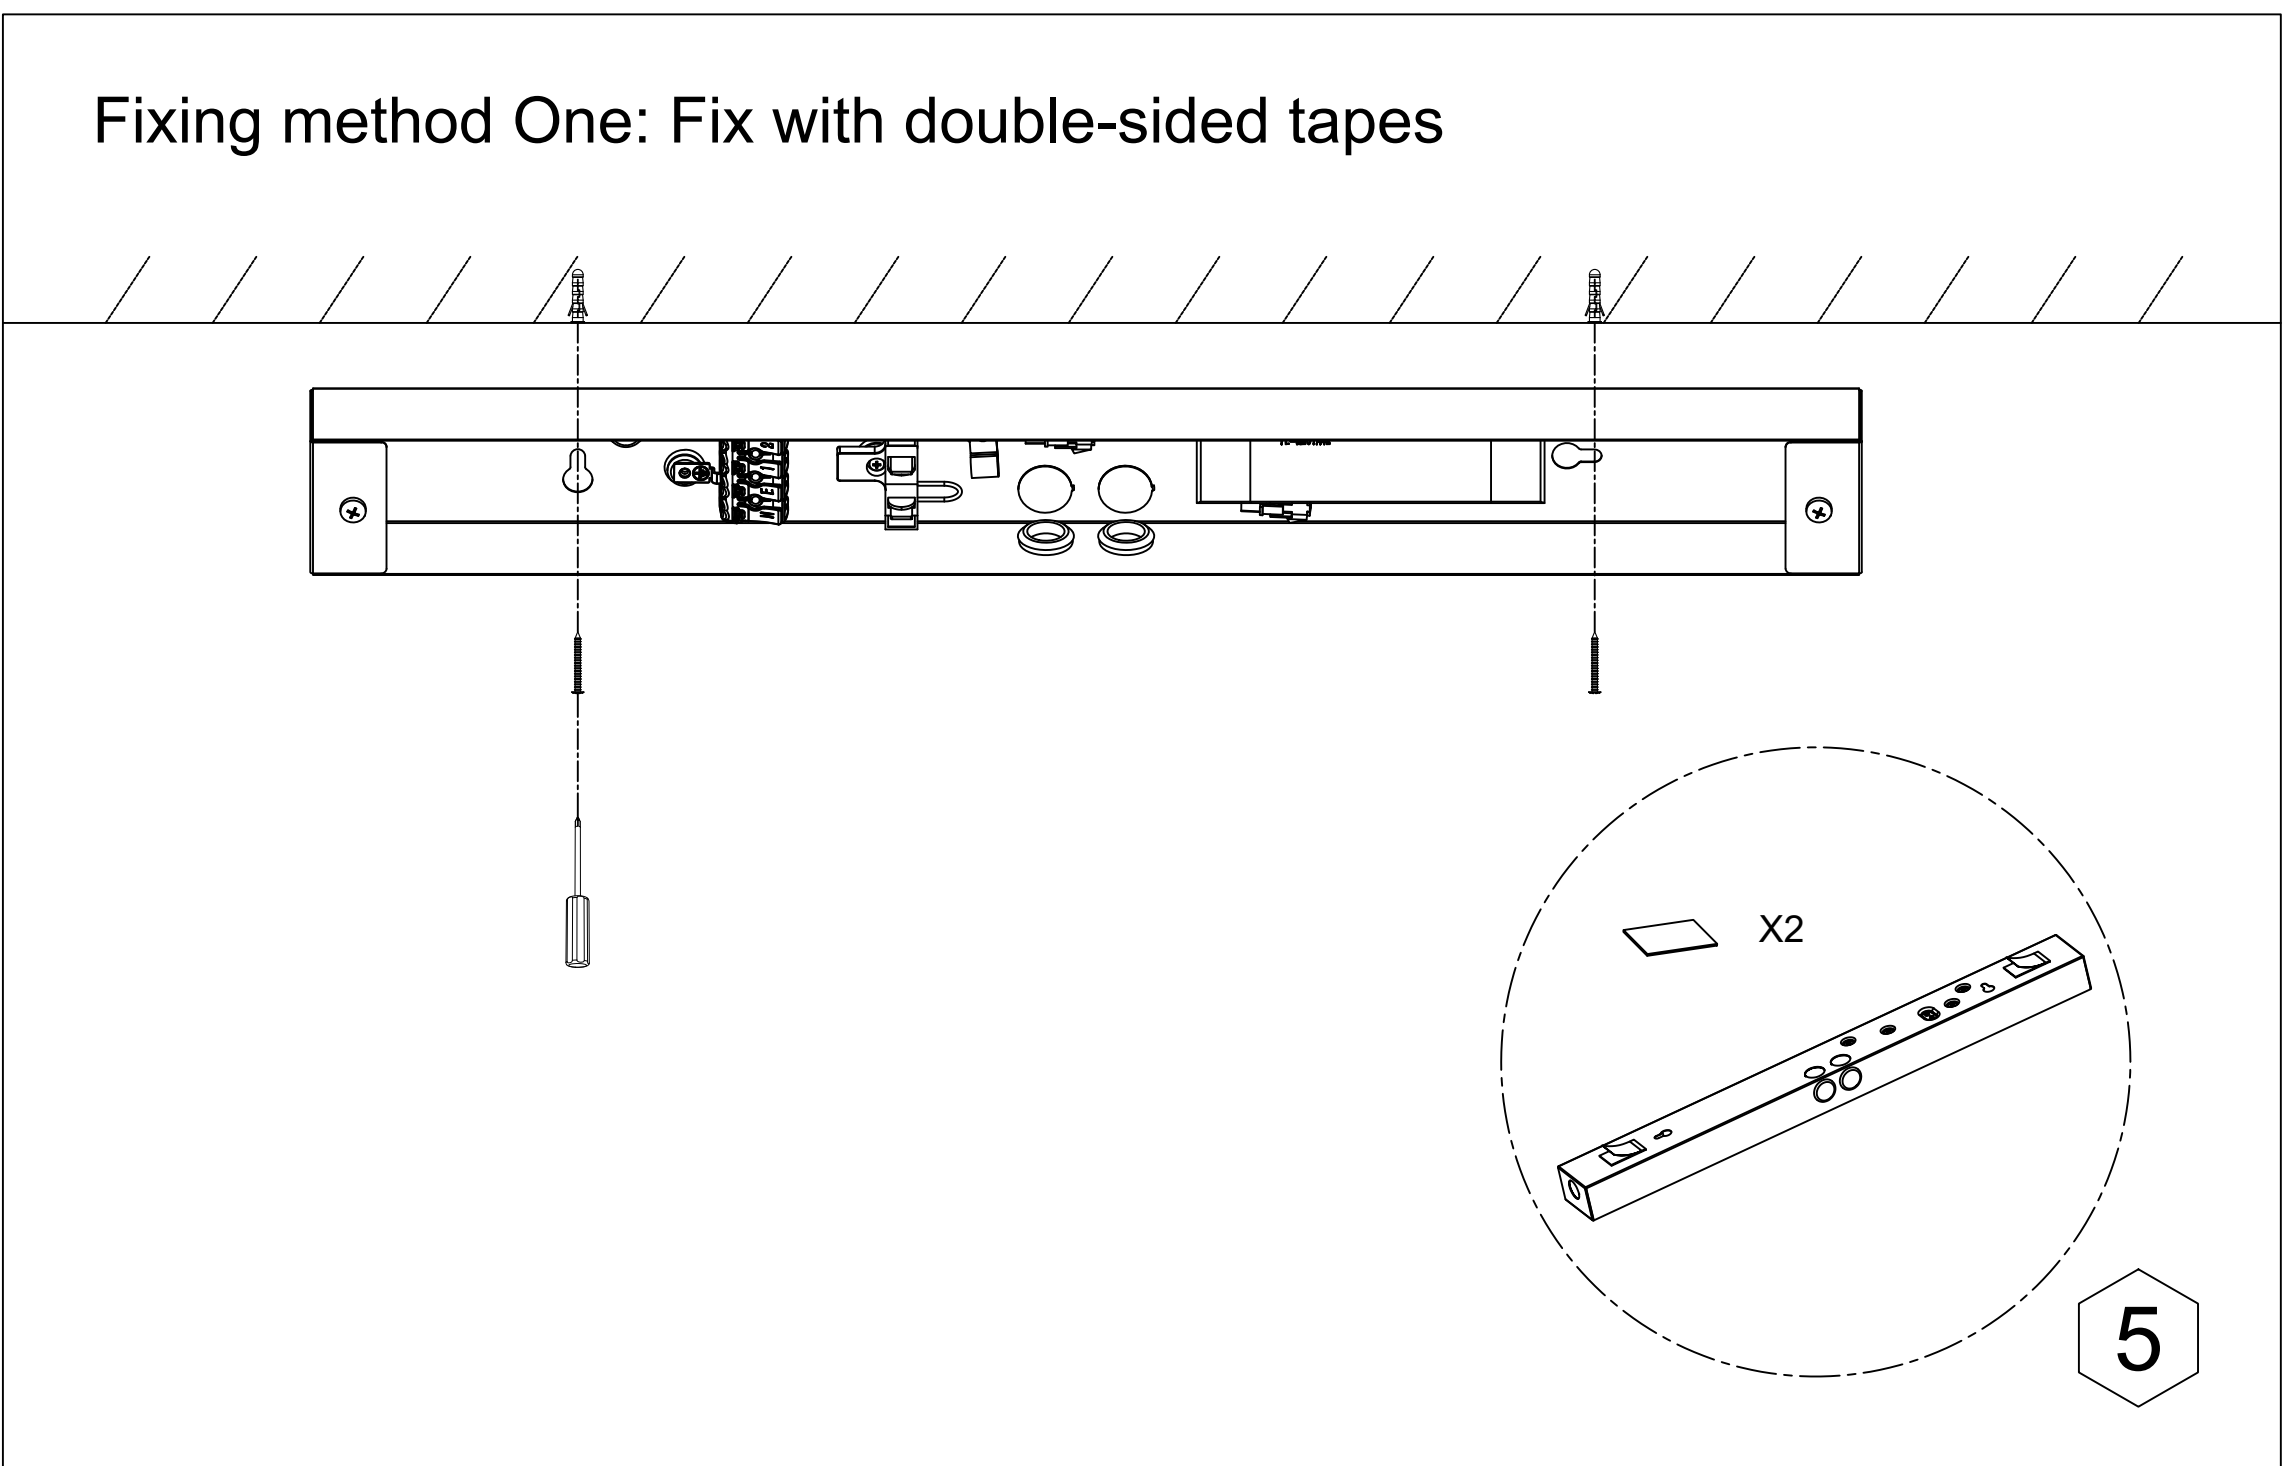


Fixing method One: Fix with double-sided tapes  
Fix the housing with double-sided tapes preliminarily to the installation surface and then tighten the housing with screws.

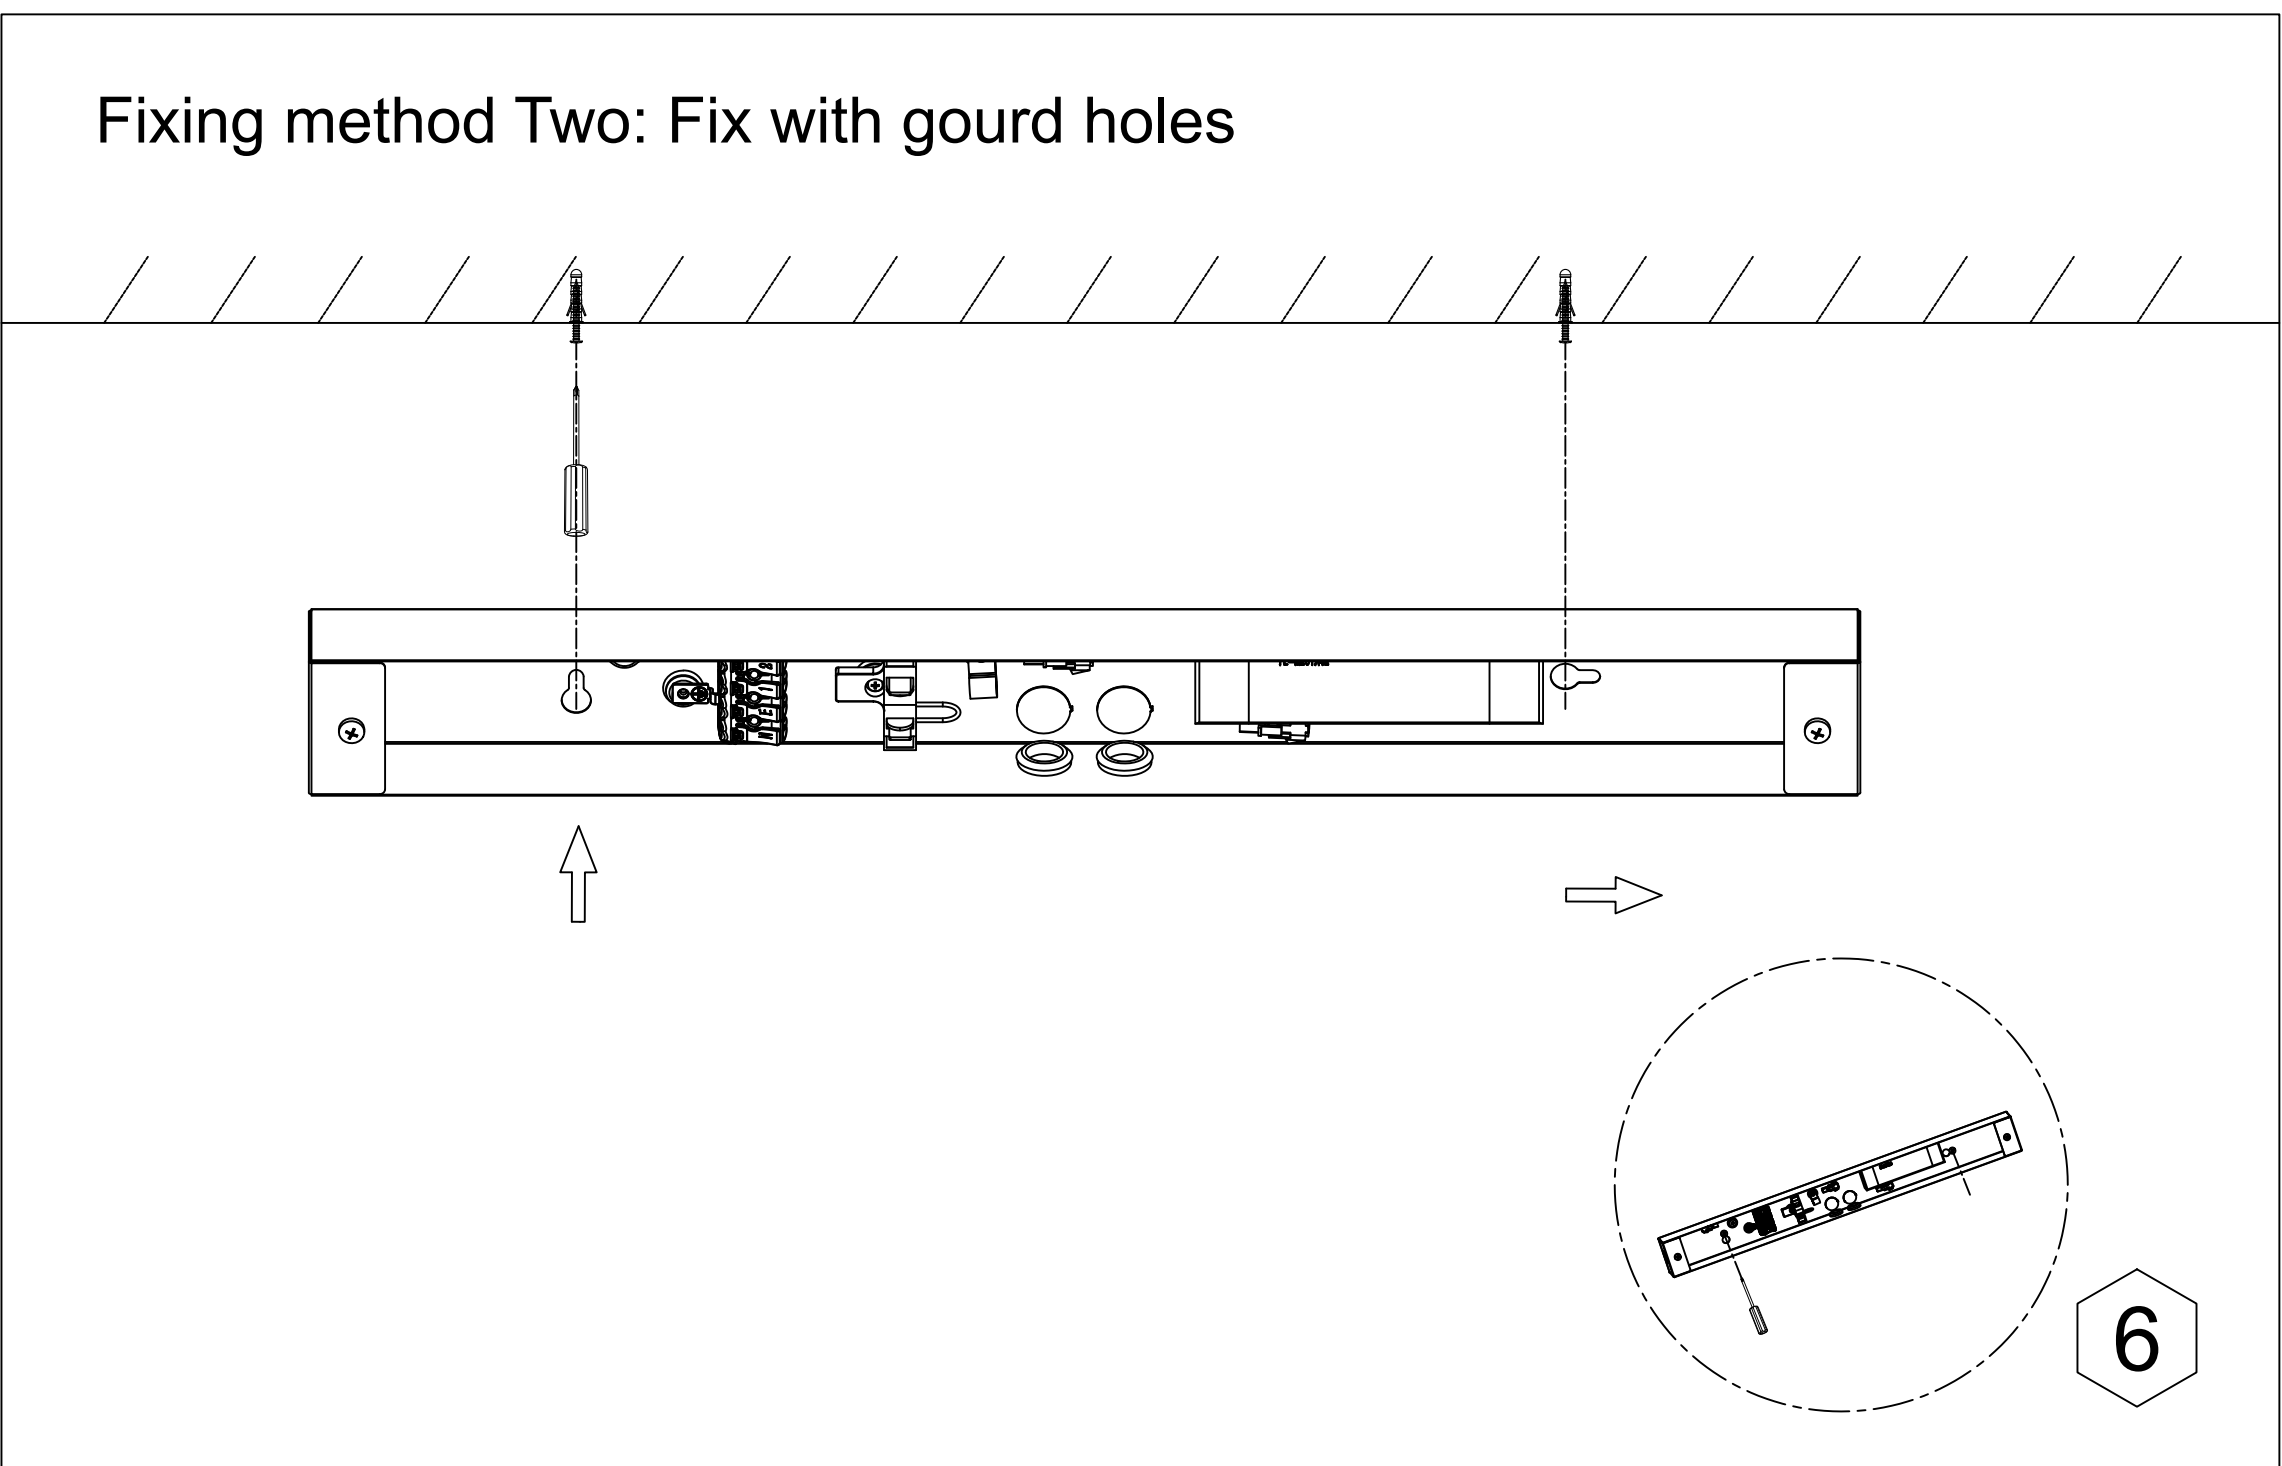


Fixing method Two: Fix with gourd holes  
1. Fix the self-tapping screws into the screw plugs, leaving a 2mm gap.  
2. Hang the housing onto the screw heads.  
3. Tighten the screws.

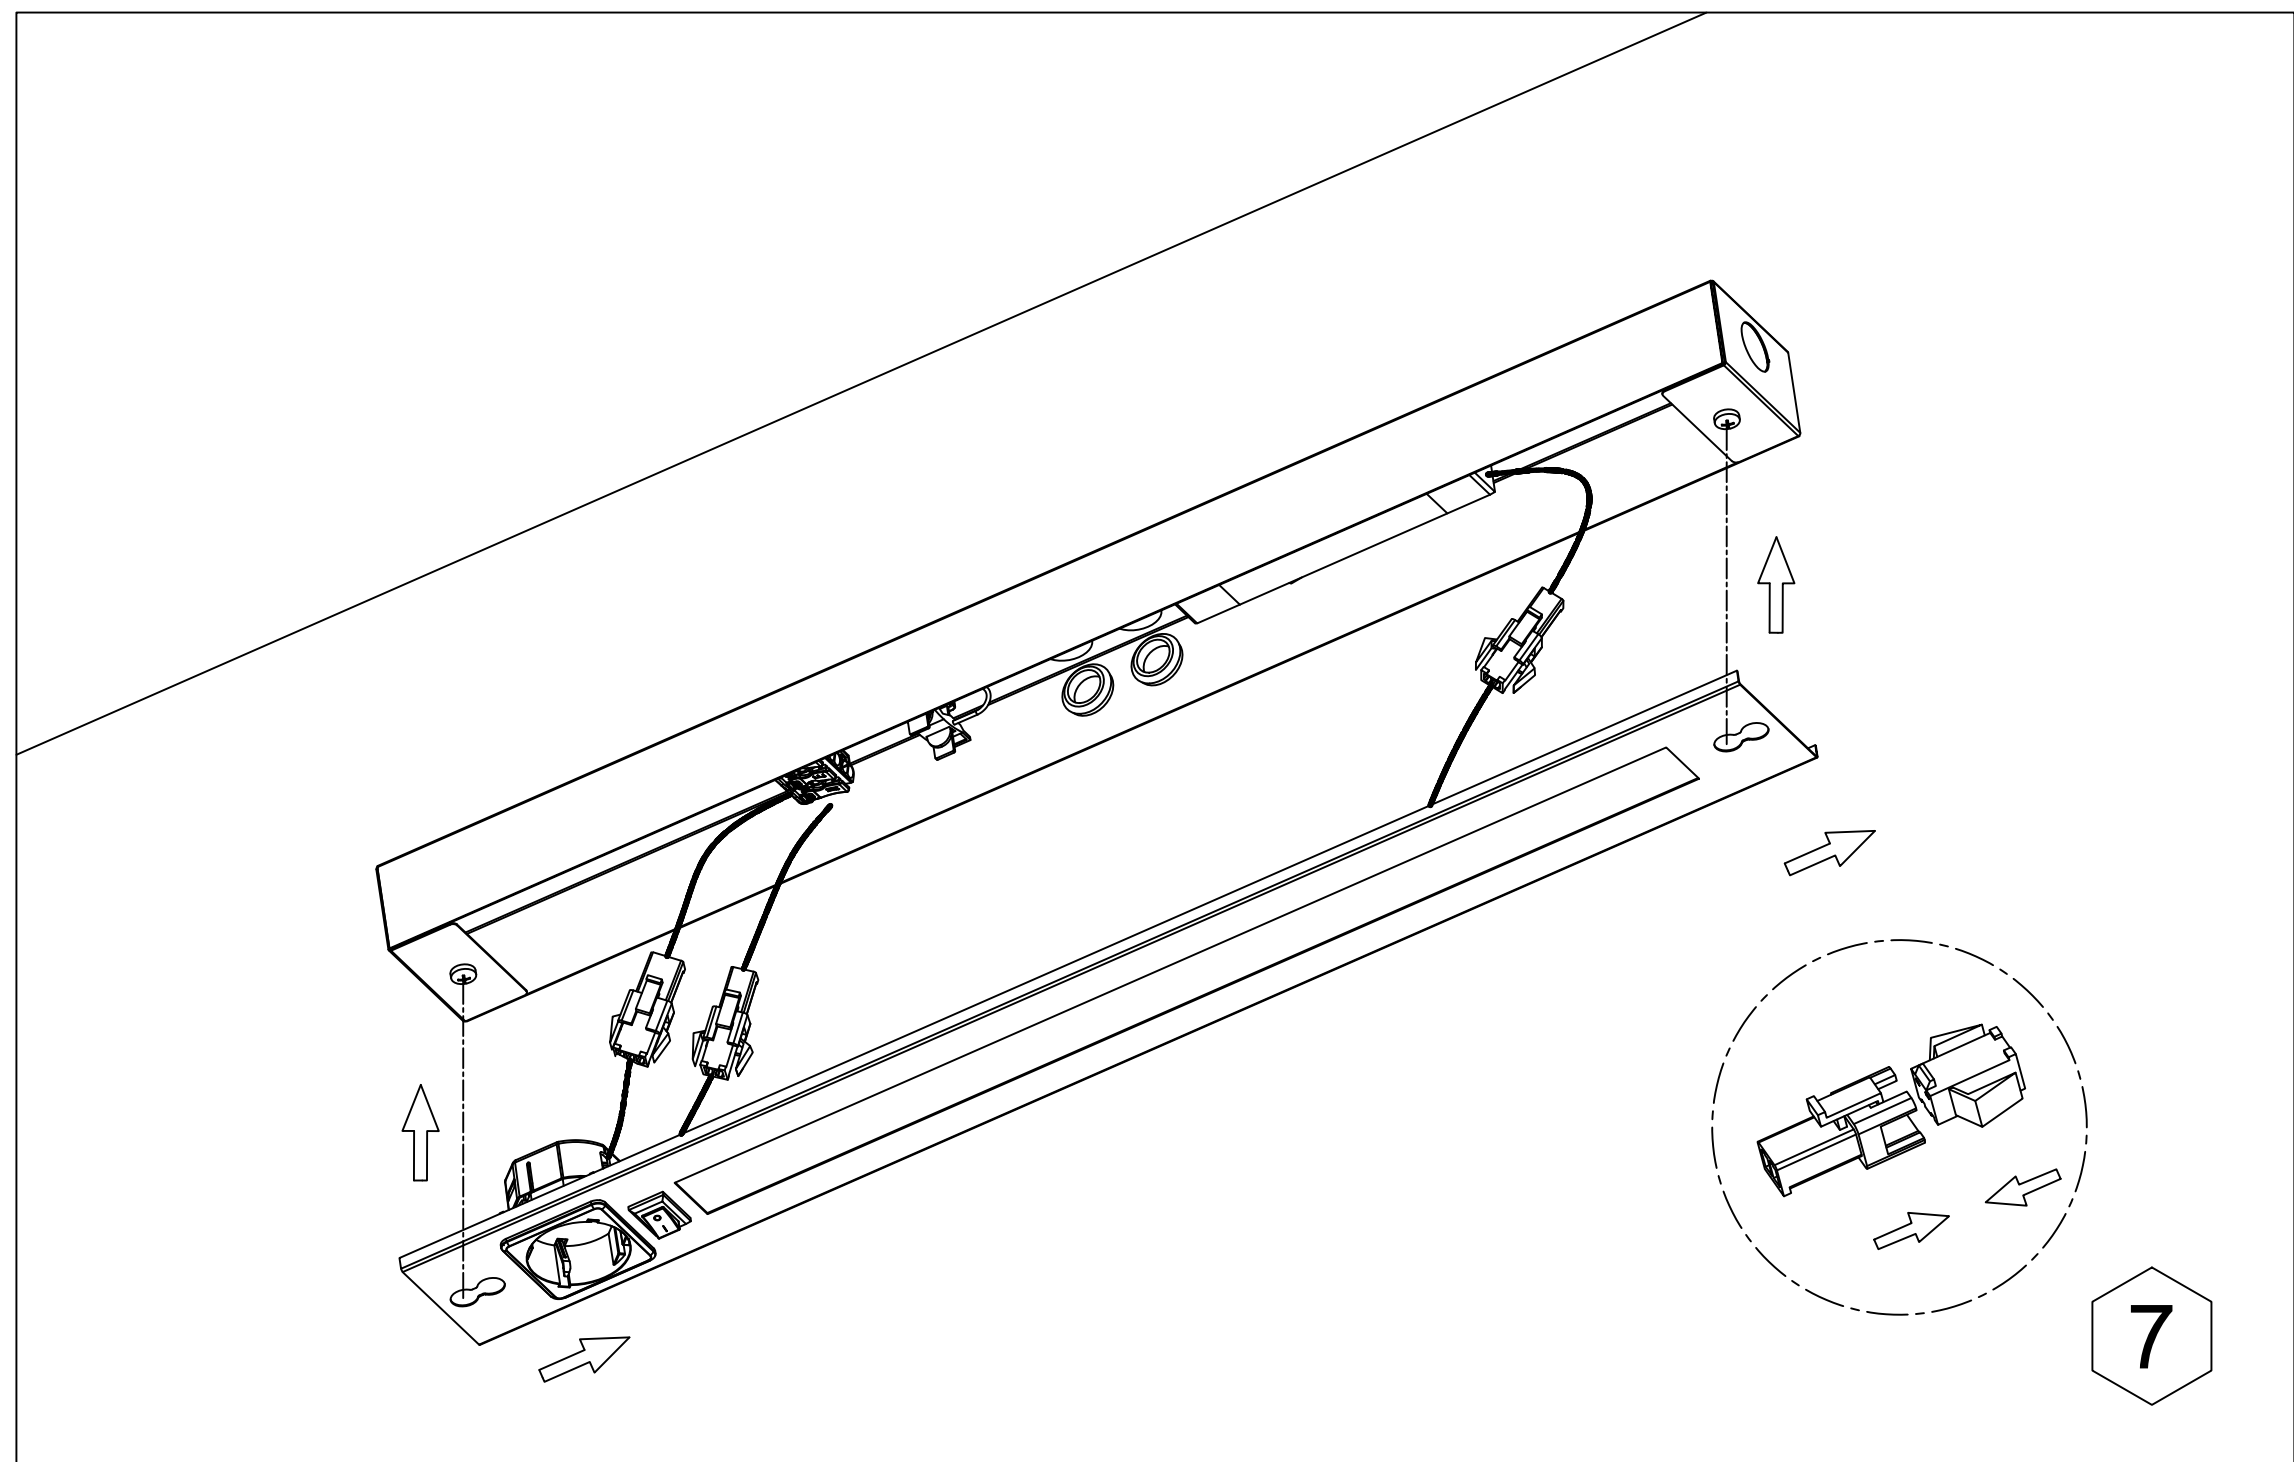

1. Connect 3 pairs of connectors.  
2. Hang the lamp shade onto the housing.

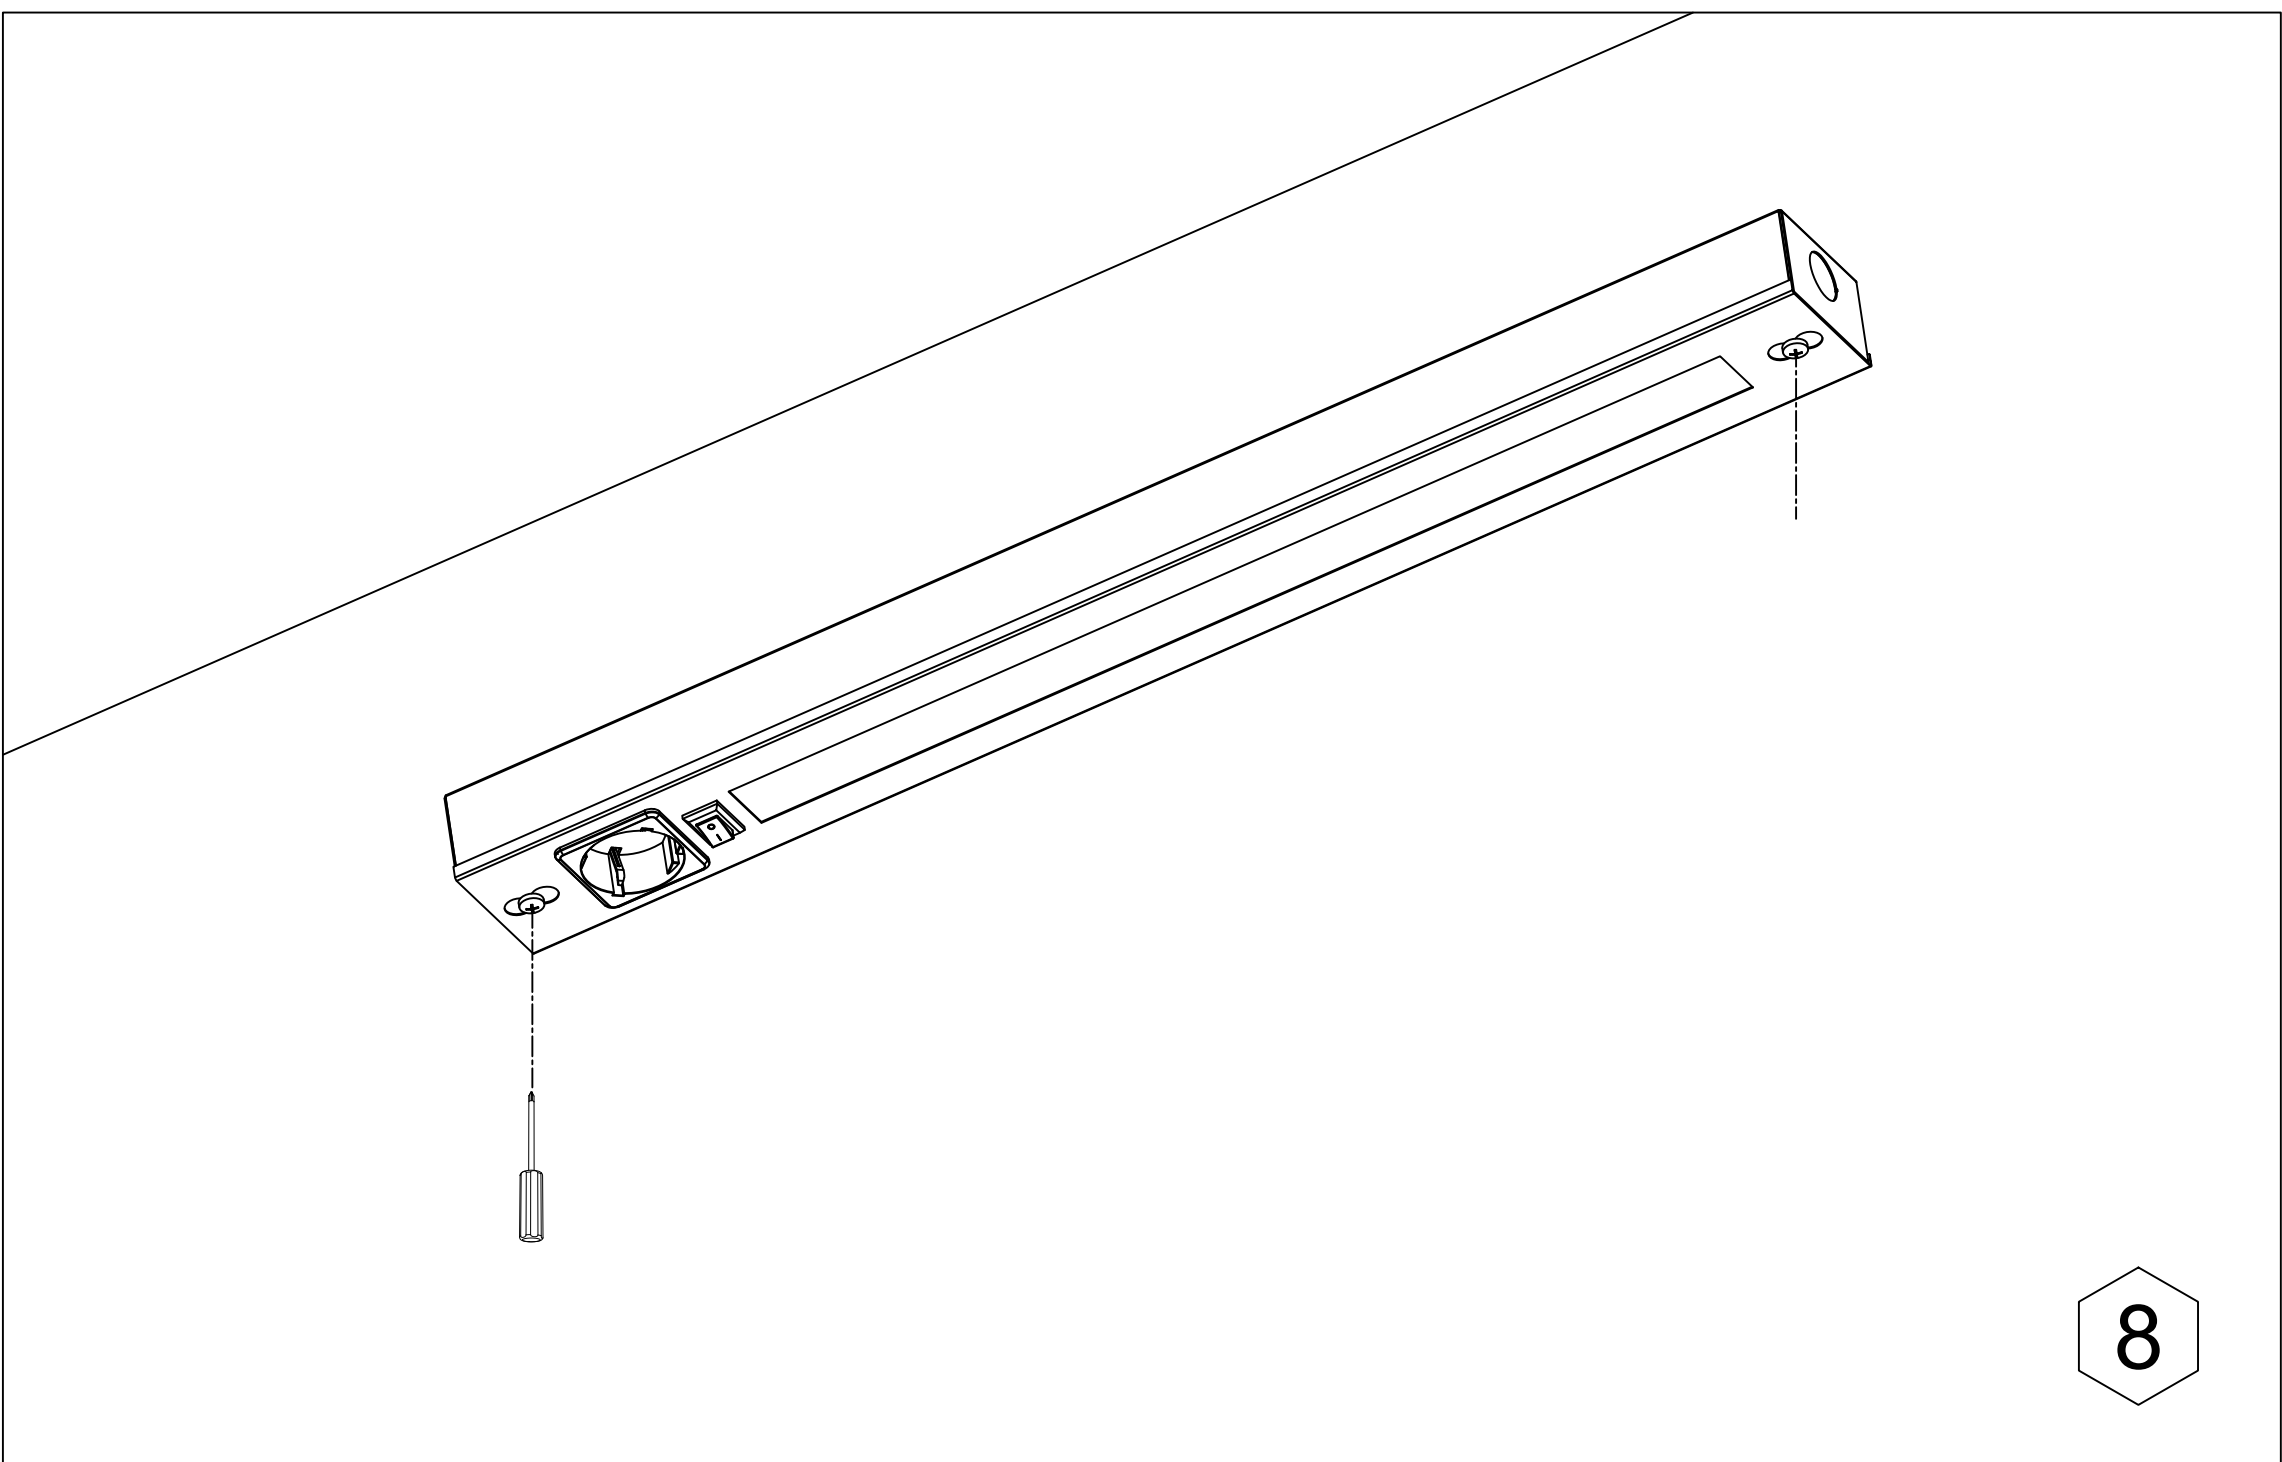


Use a screwdriver to tighten the screws.

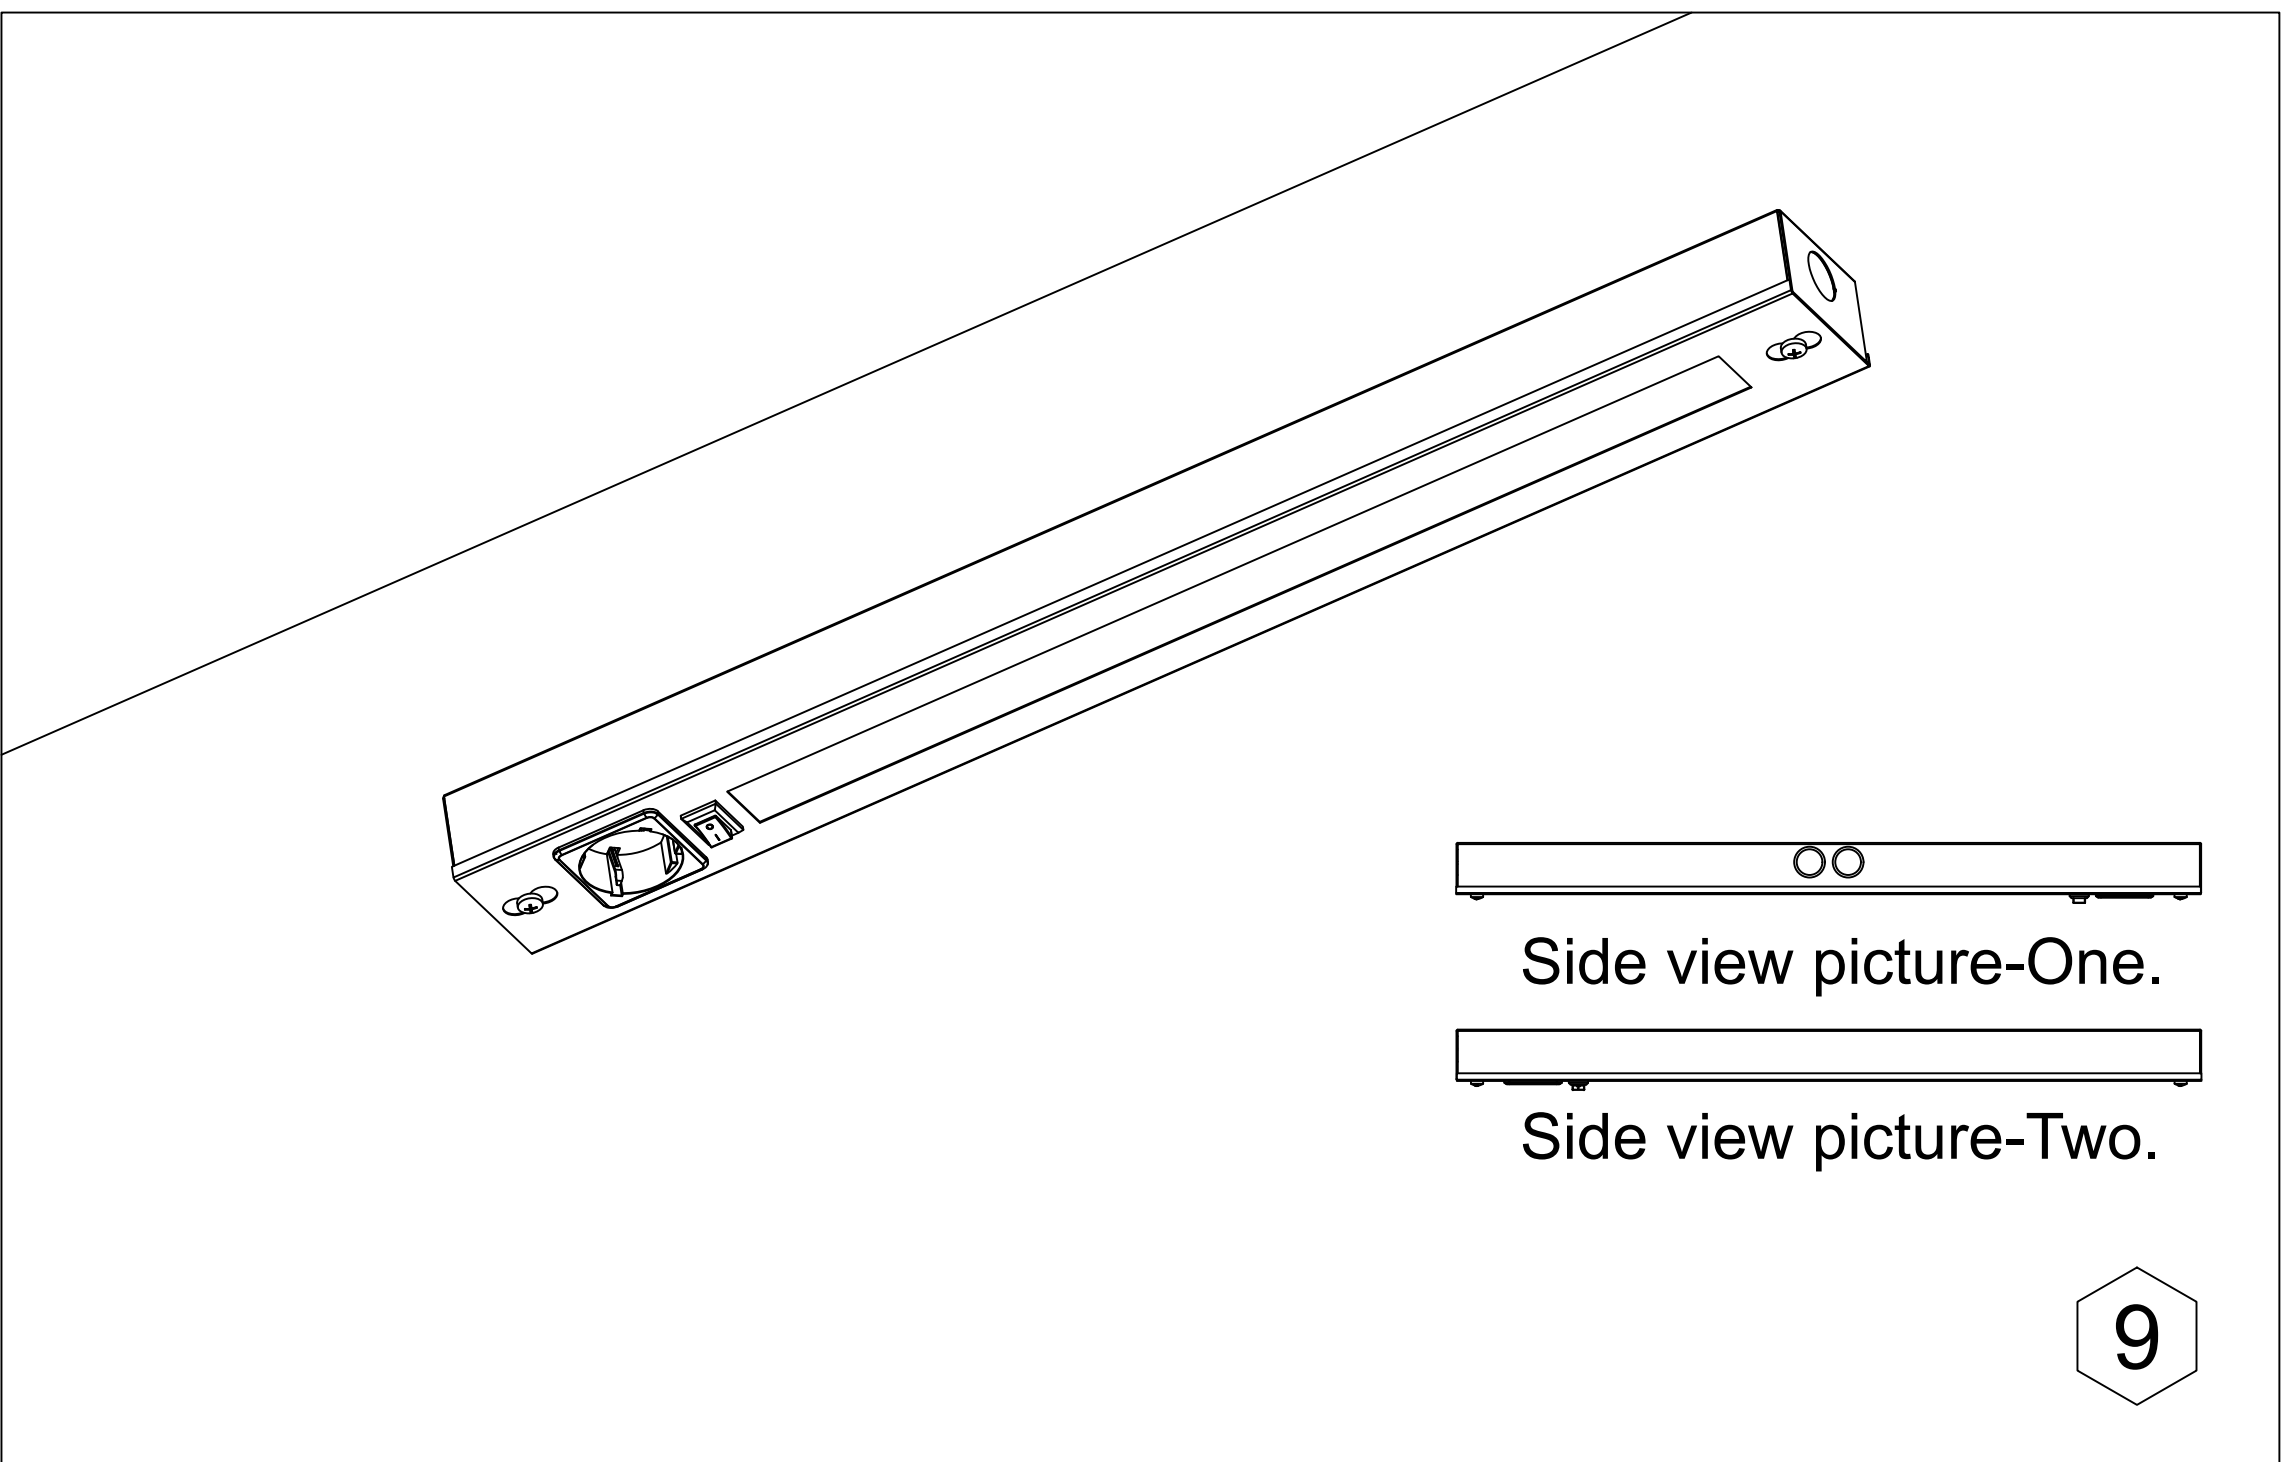


Finish the installation.


# Cabinet light Wiring Instructions

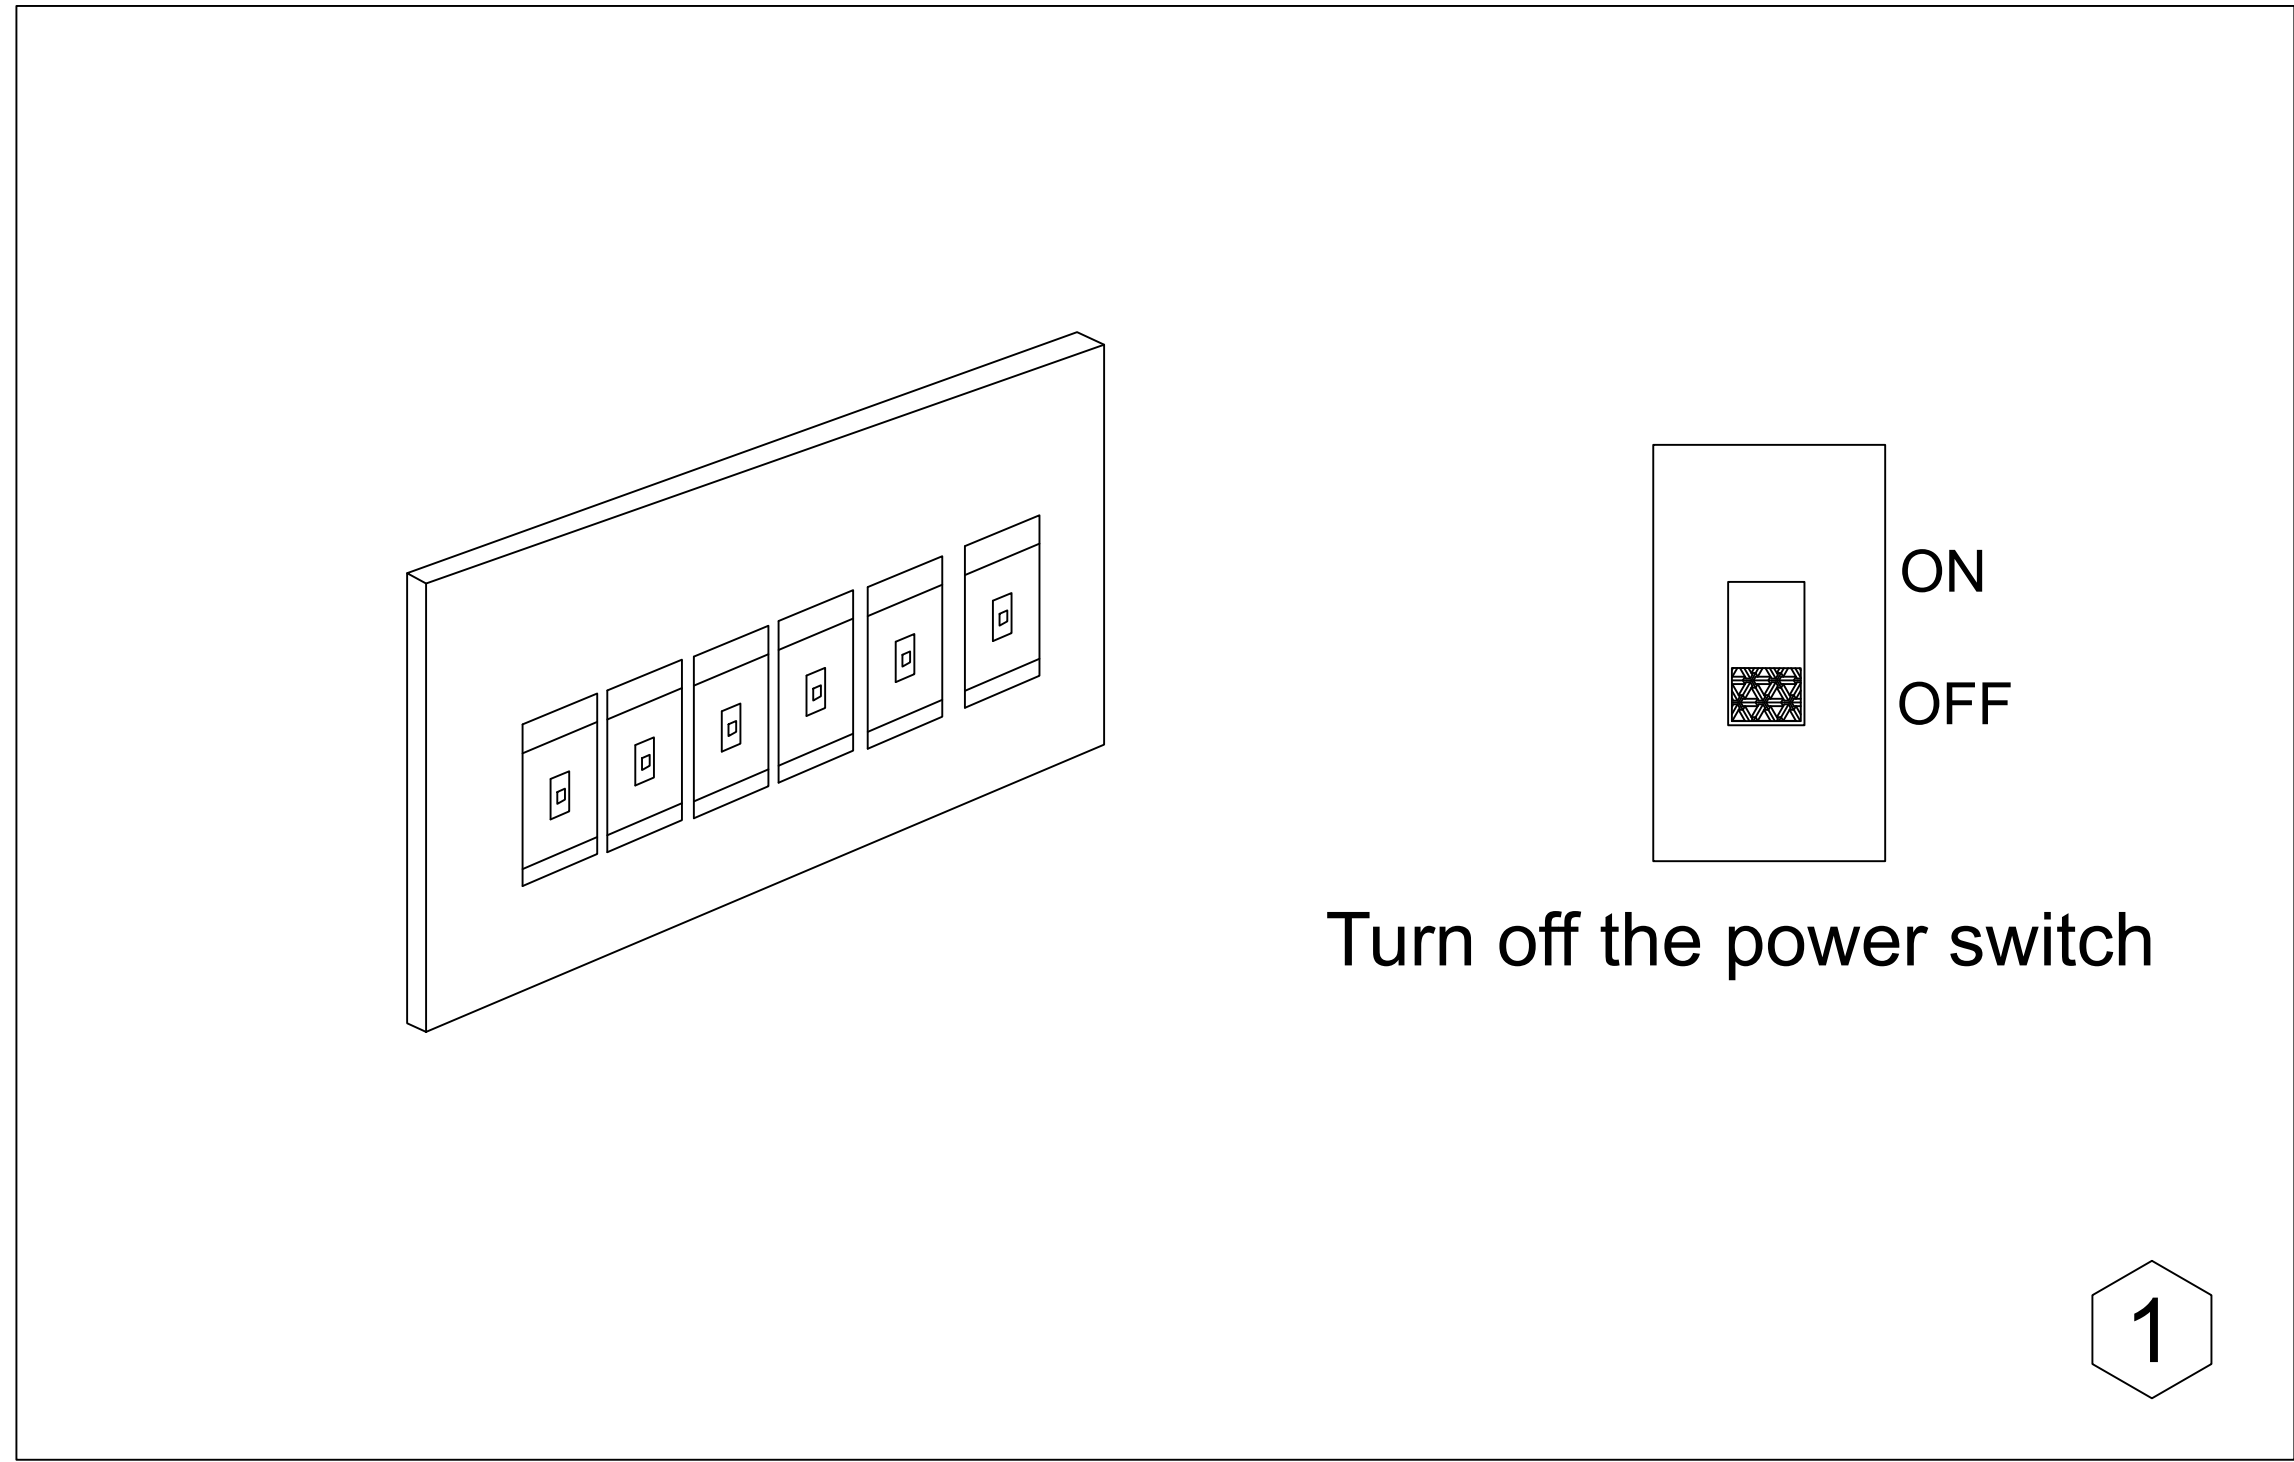


⚠ Disconnect mains supply before installation.

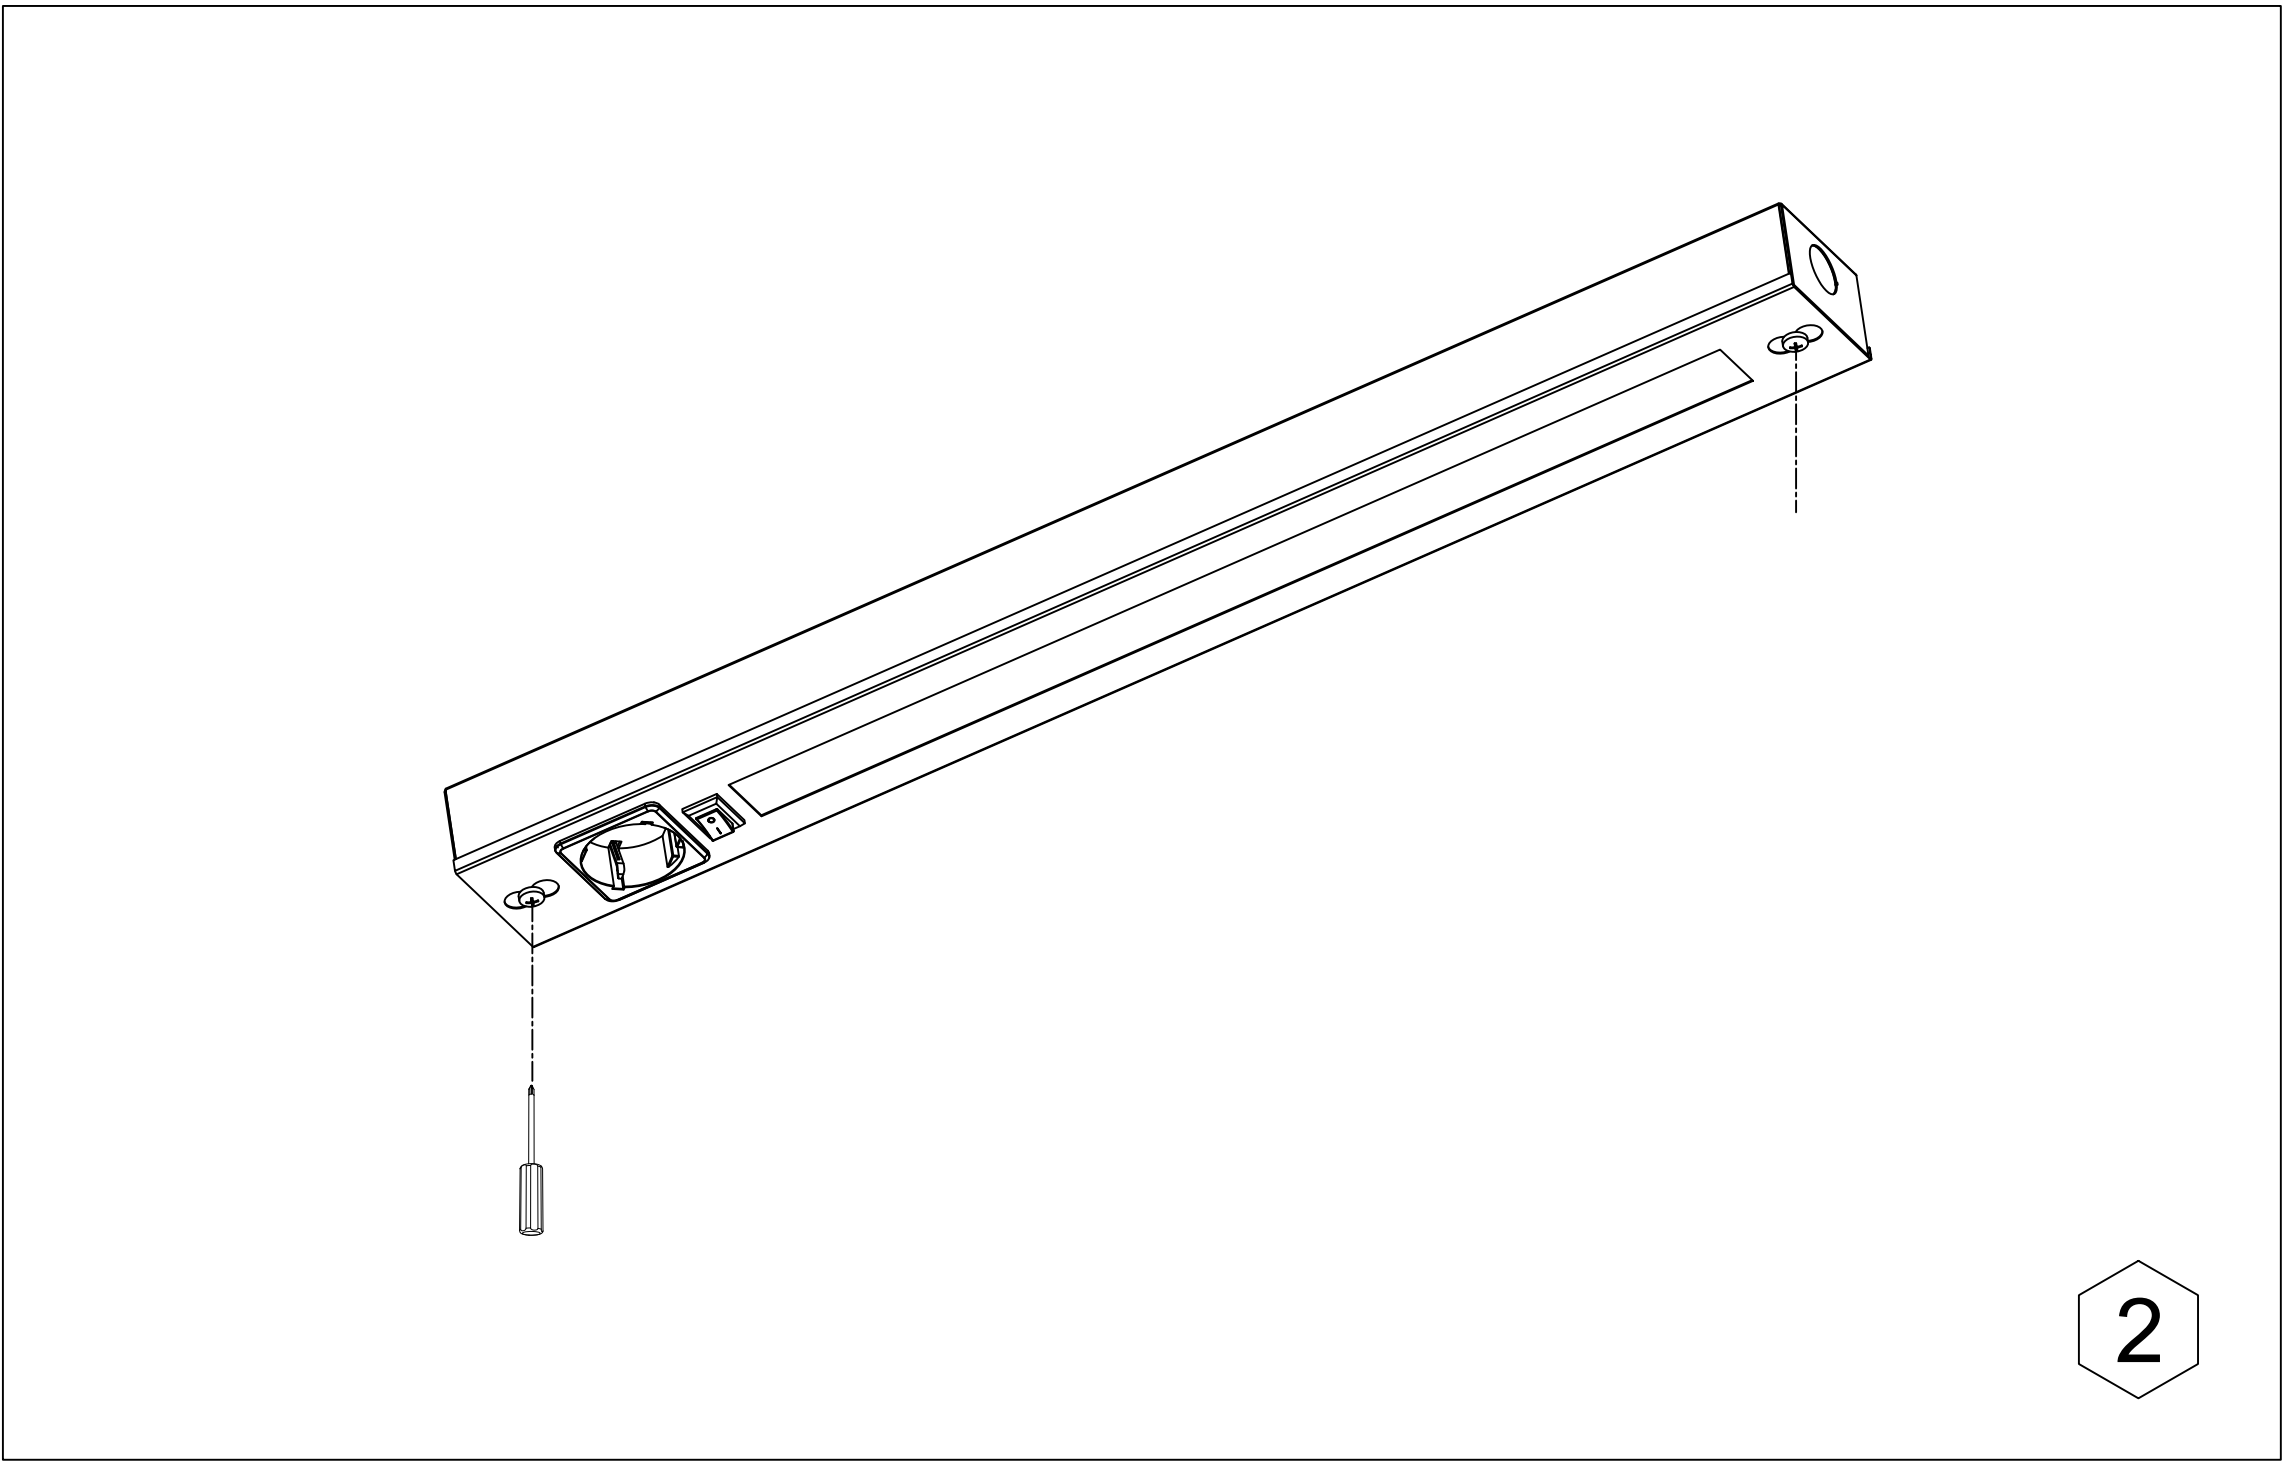


Loosen the screws at both ends by two turns with a screwdriver.

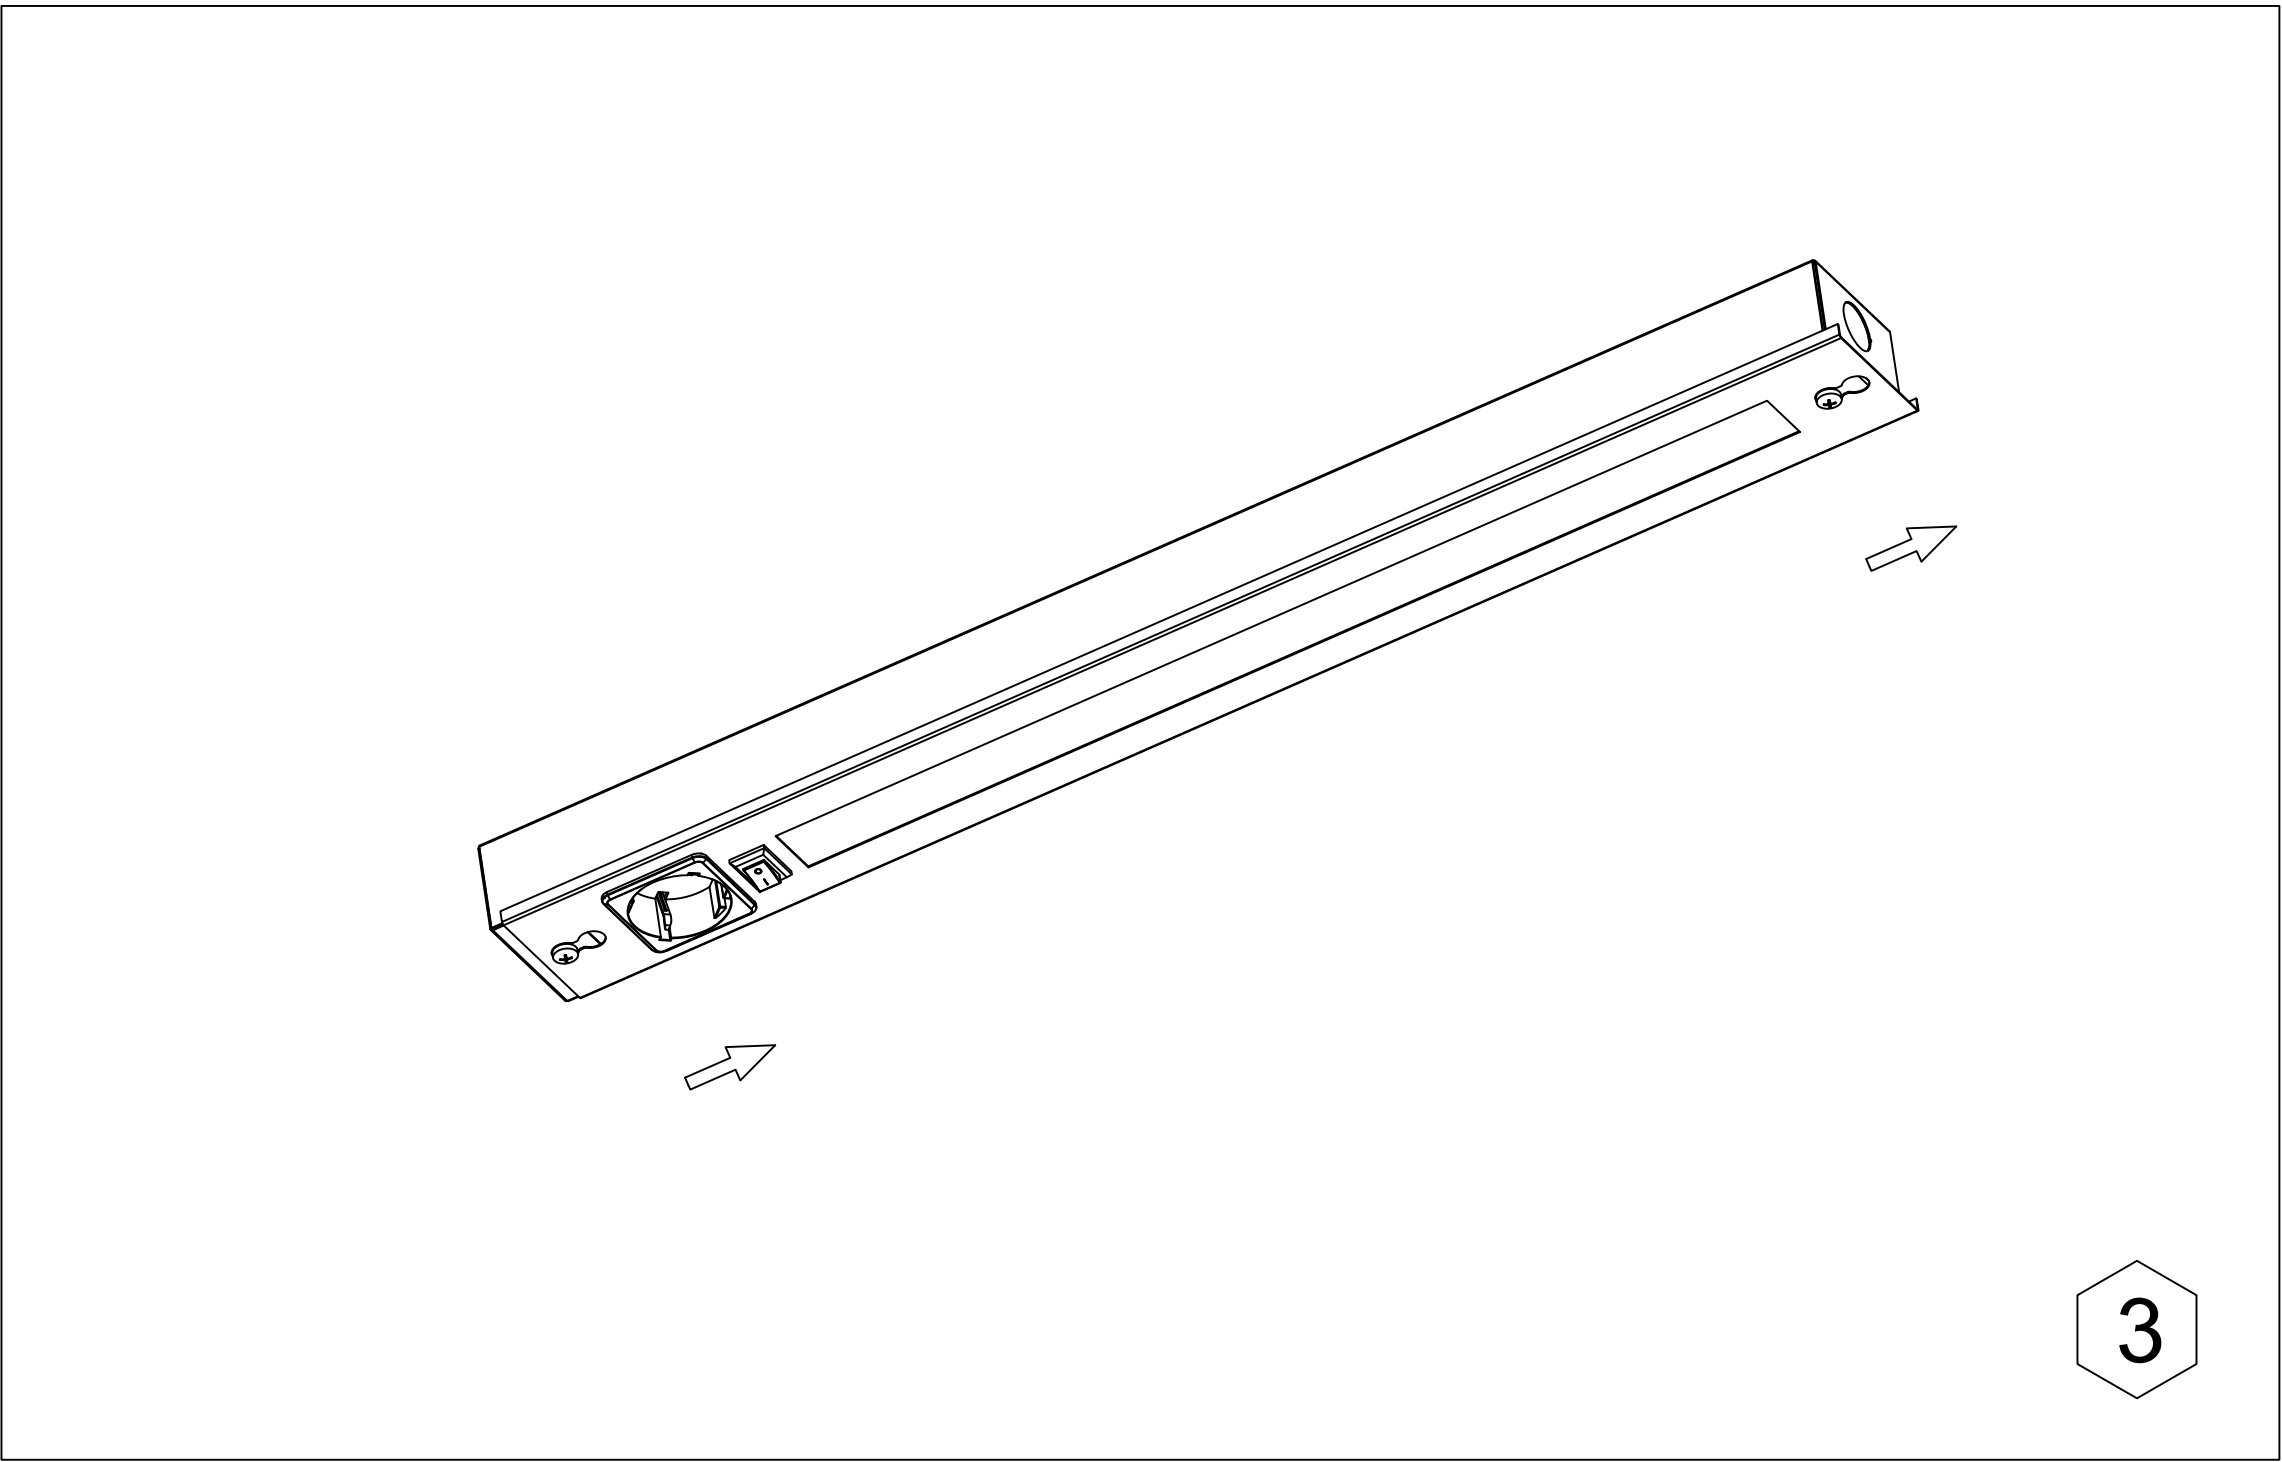


Push the lamp shade towards either end to make the screw heads fit into the holes.

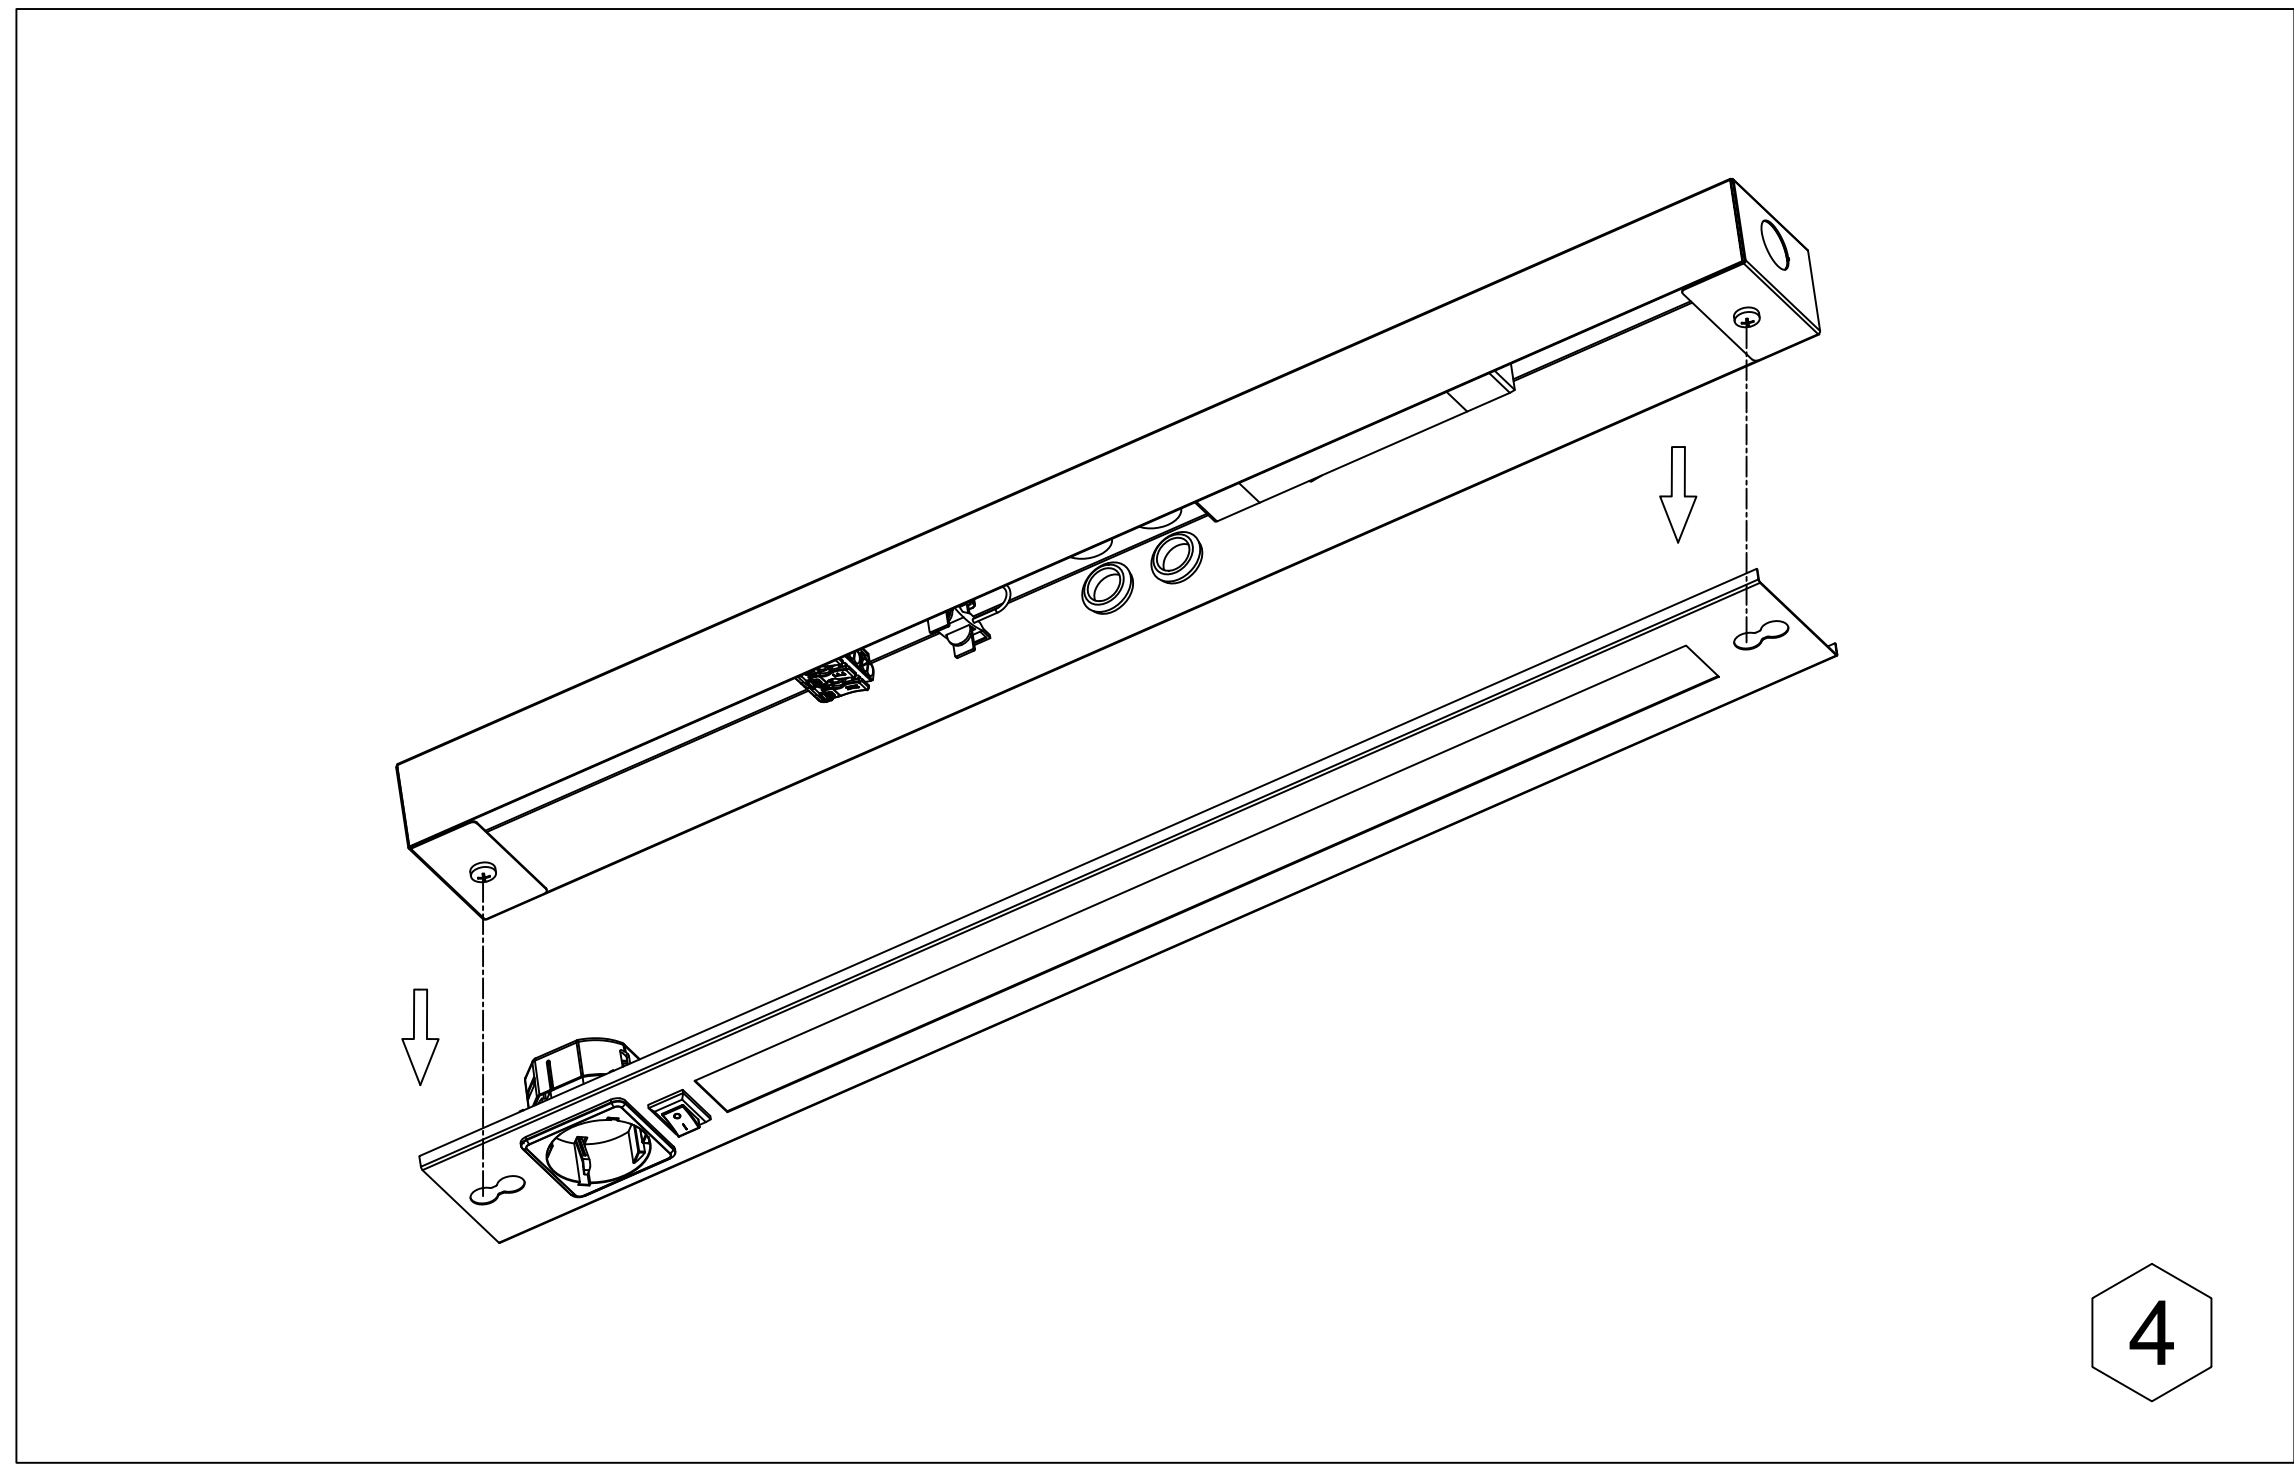


Remove the lamp shade from the housing.

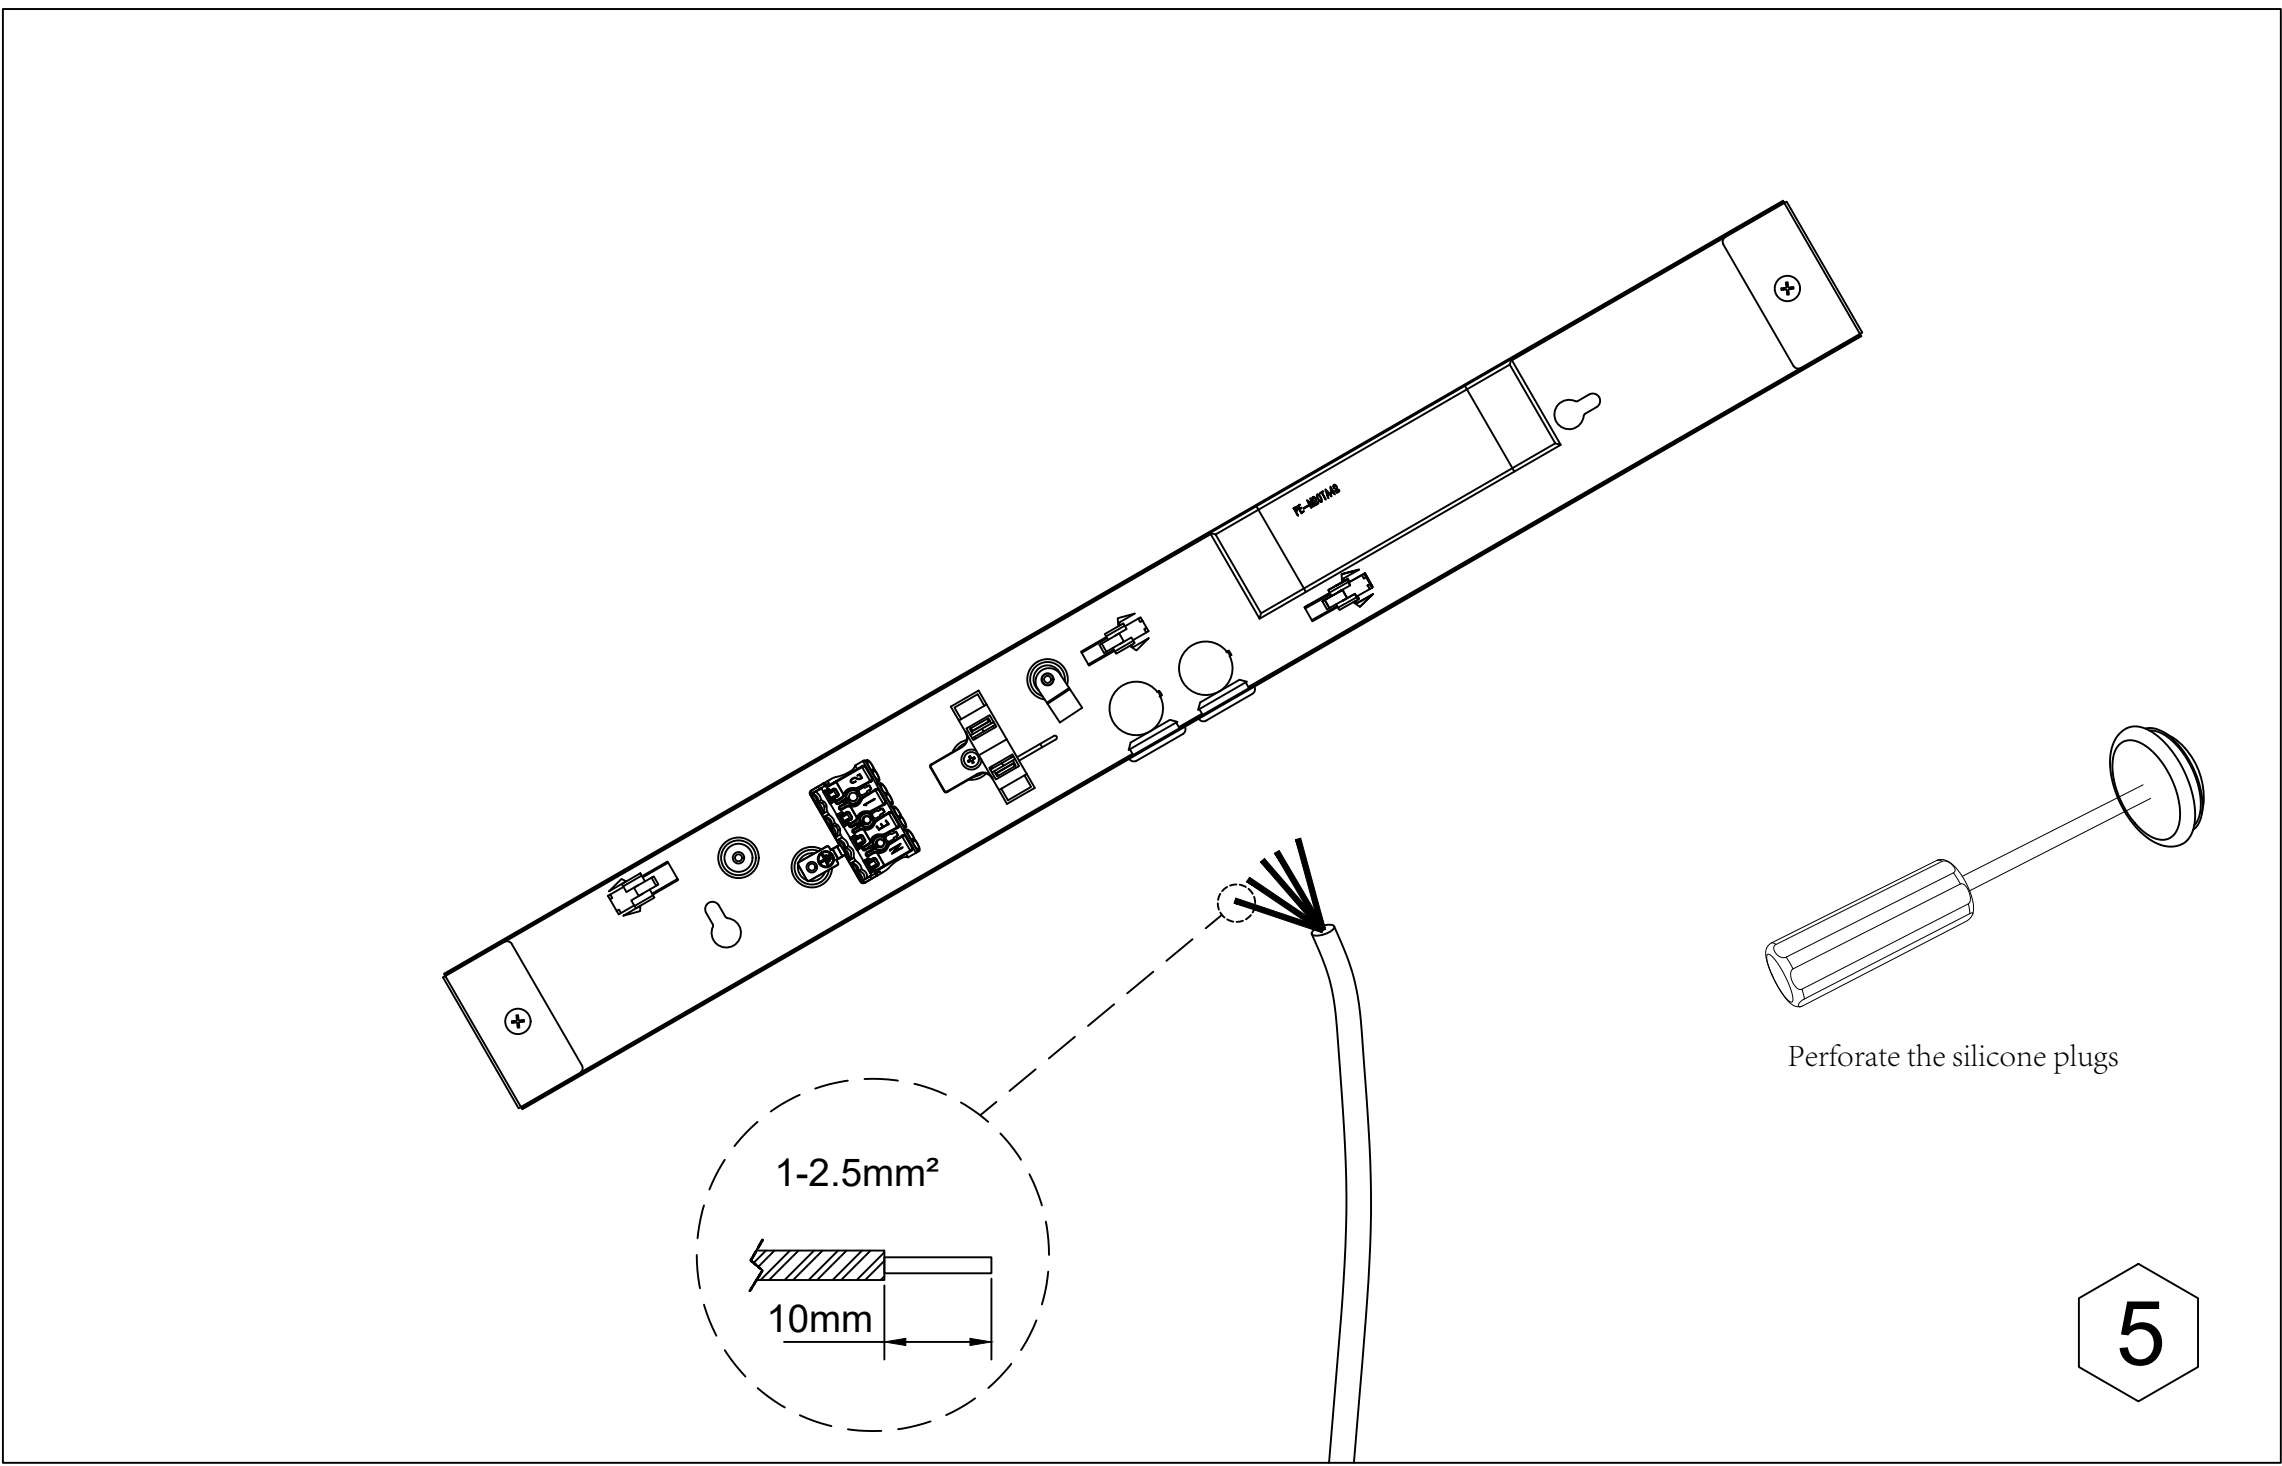


Strip the mains cable by 10mm and expose the copper wire part.

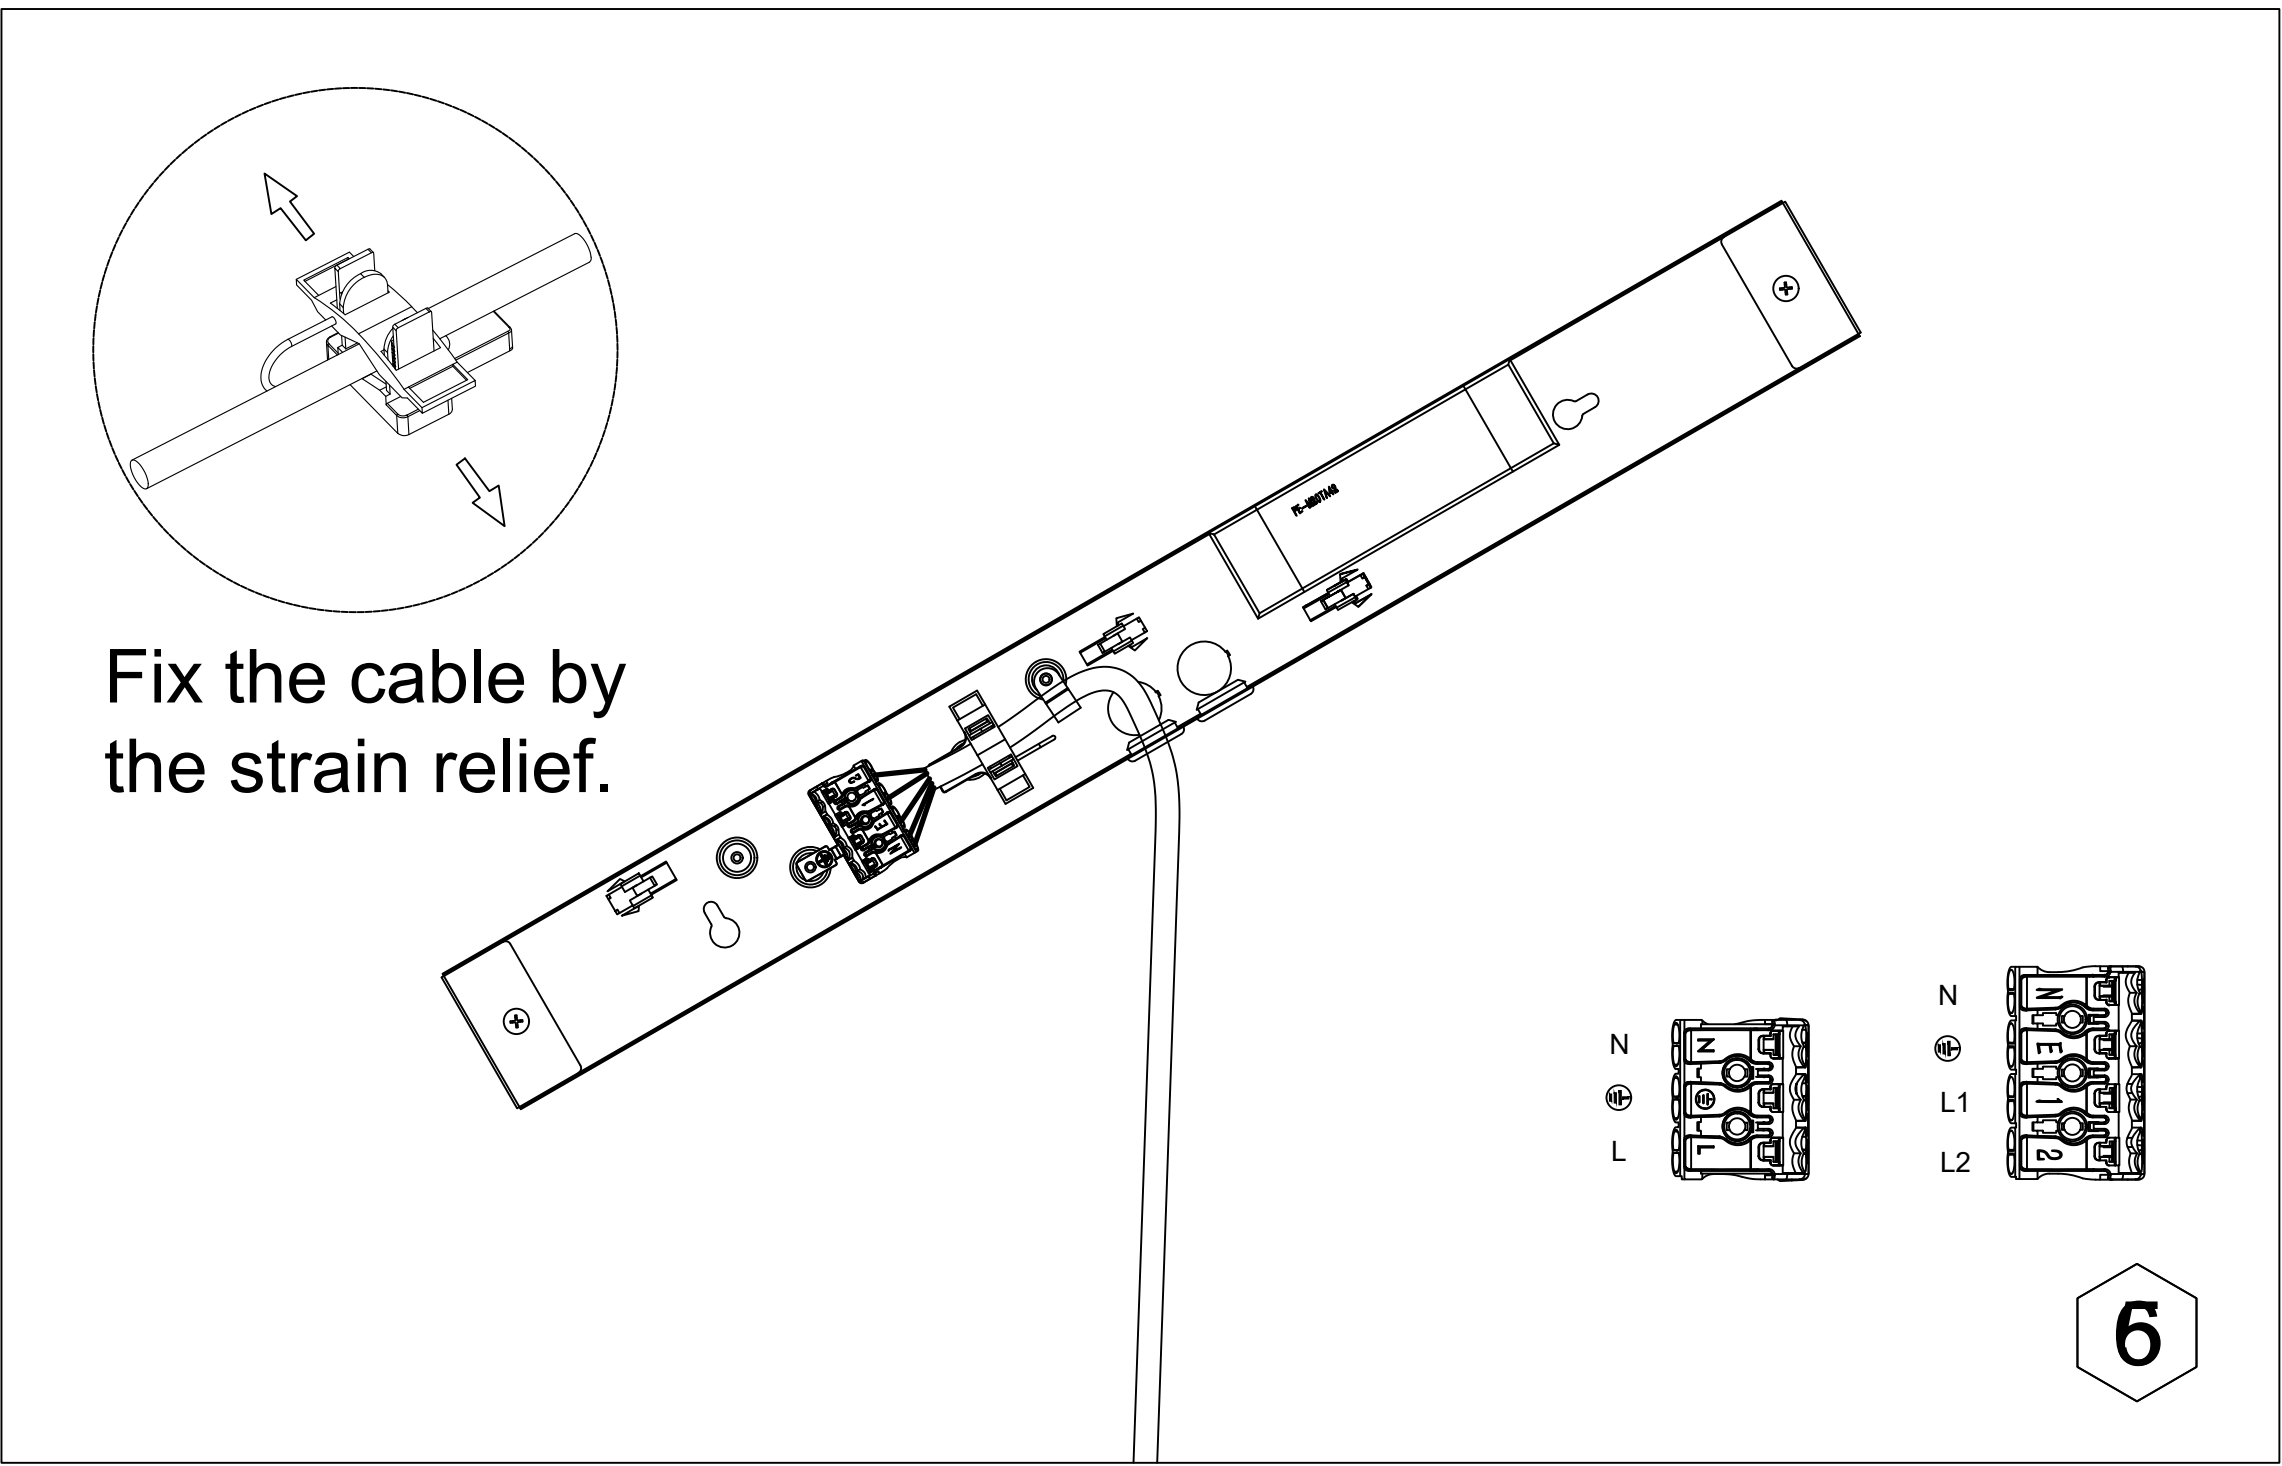


Pull the mains cable through the silicone plugs and fix it to the quick connector.

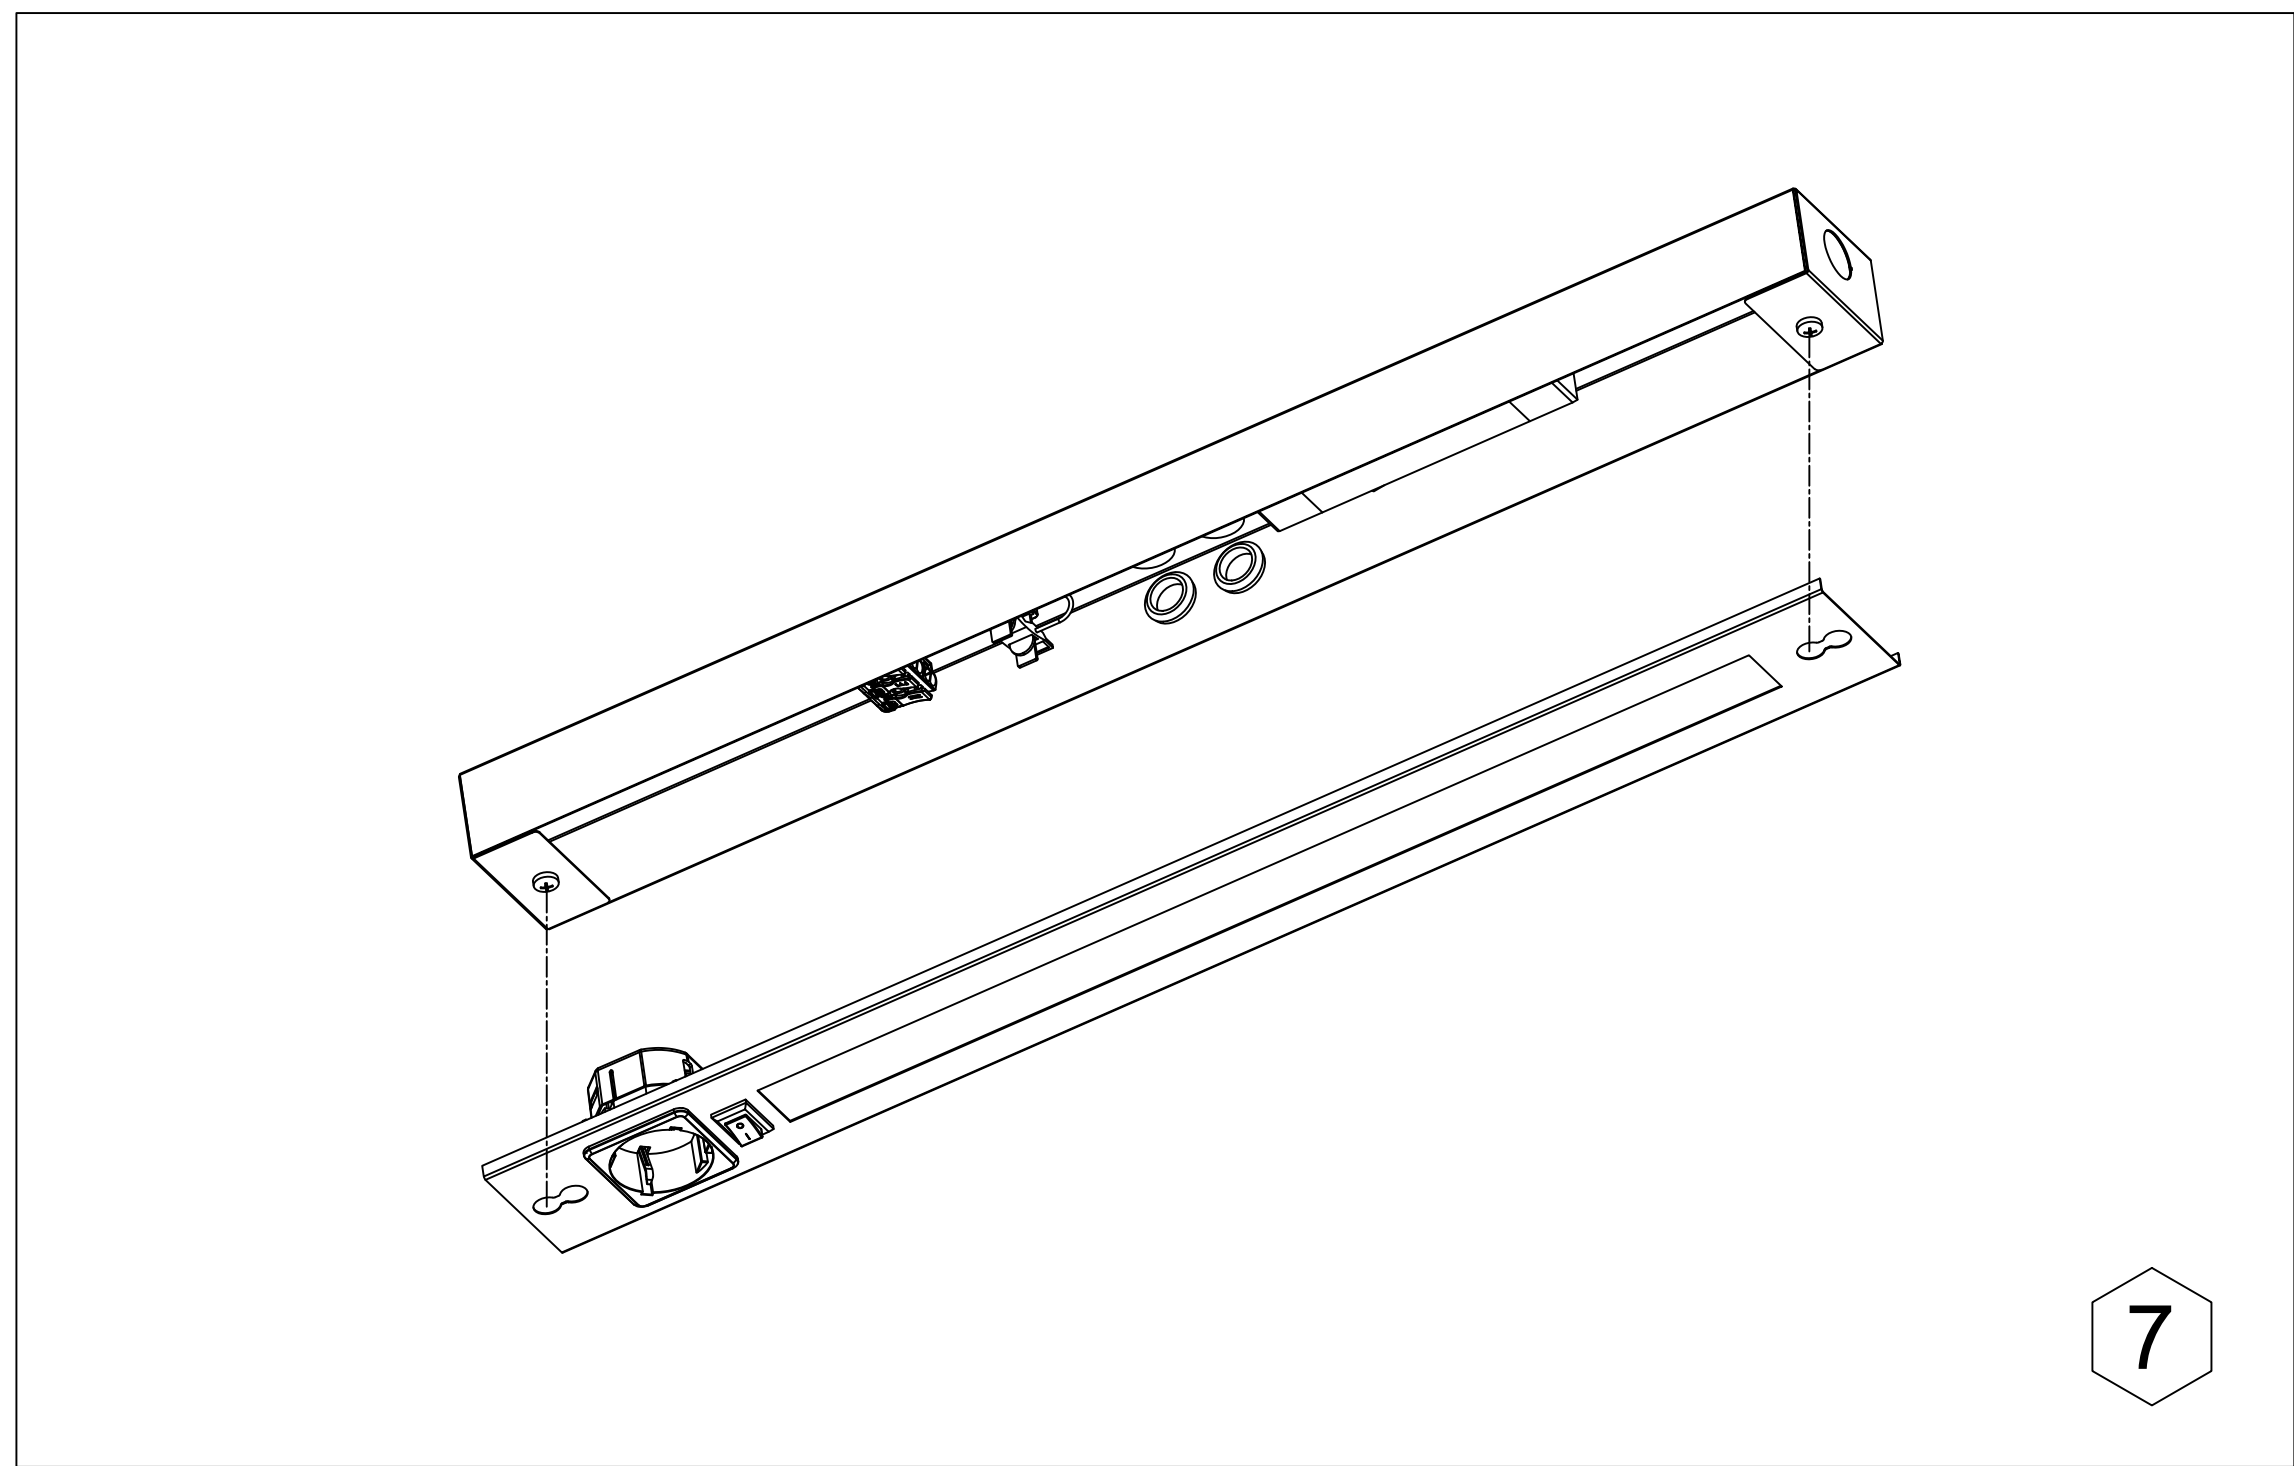

Hang the lamp shade onto the housing.

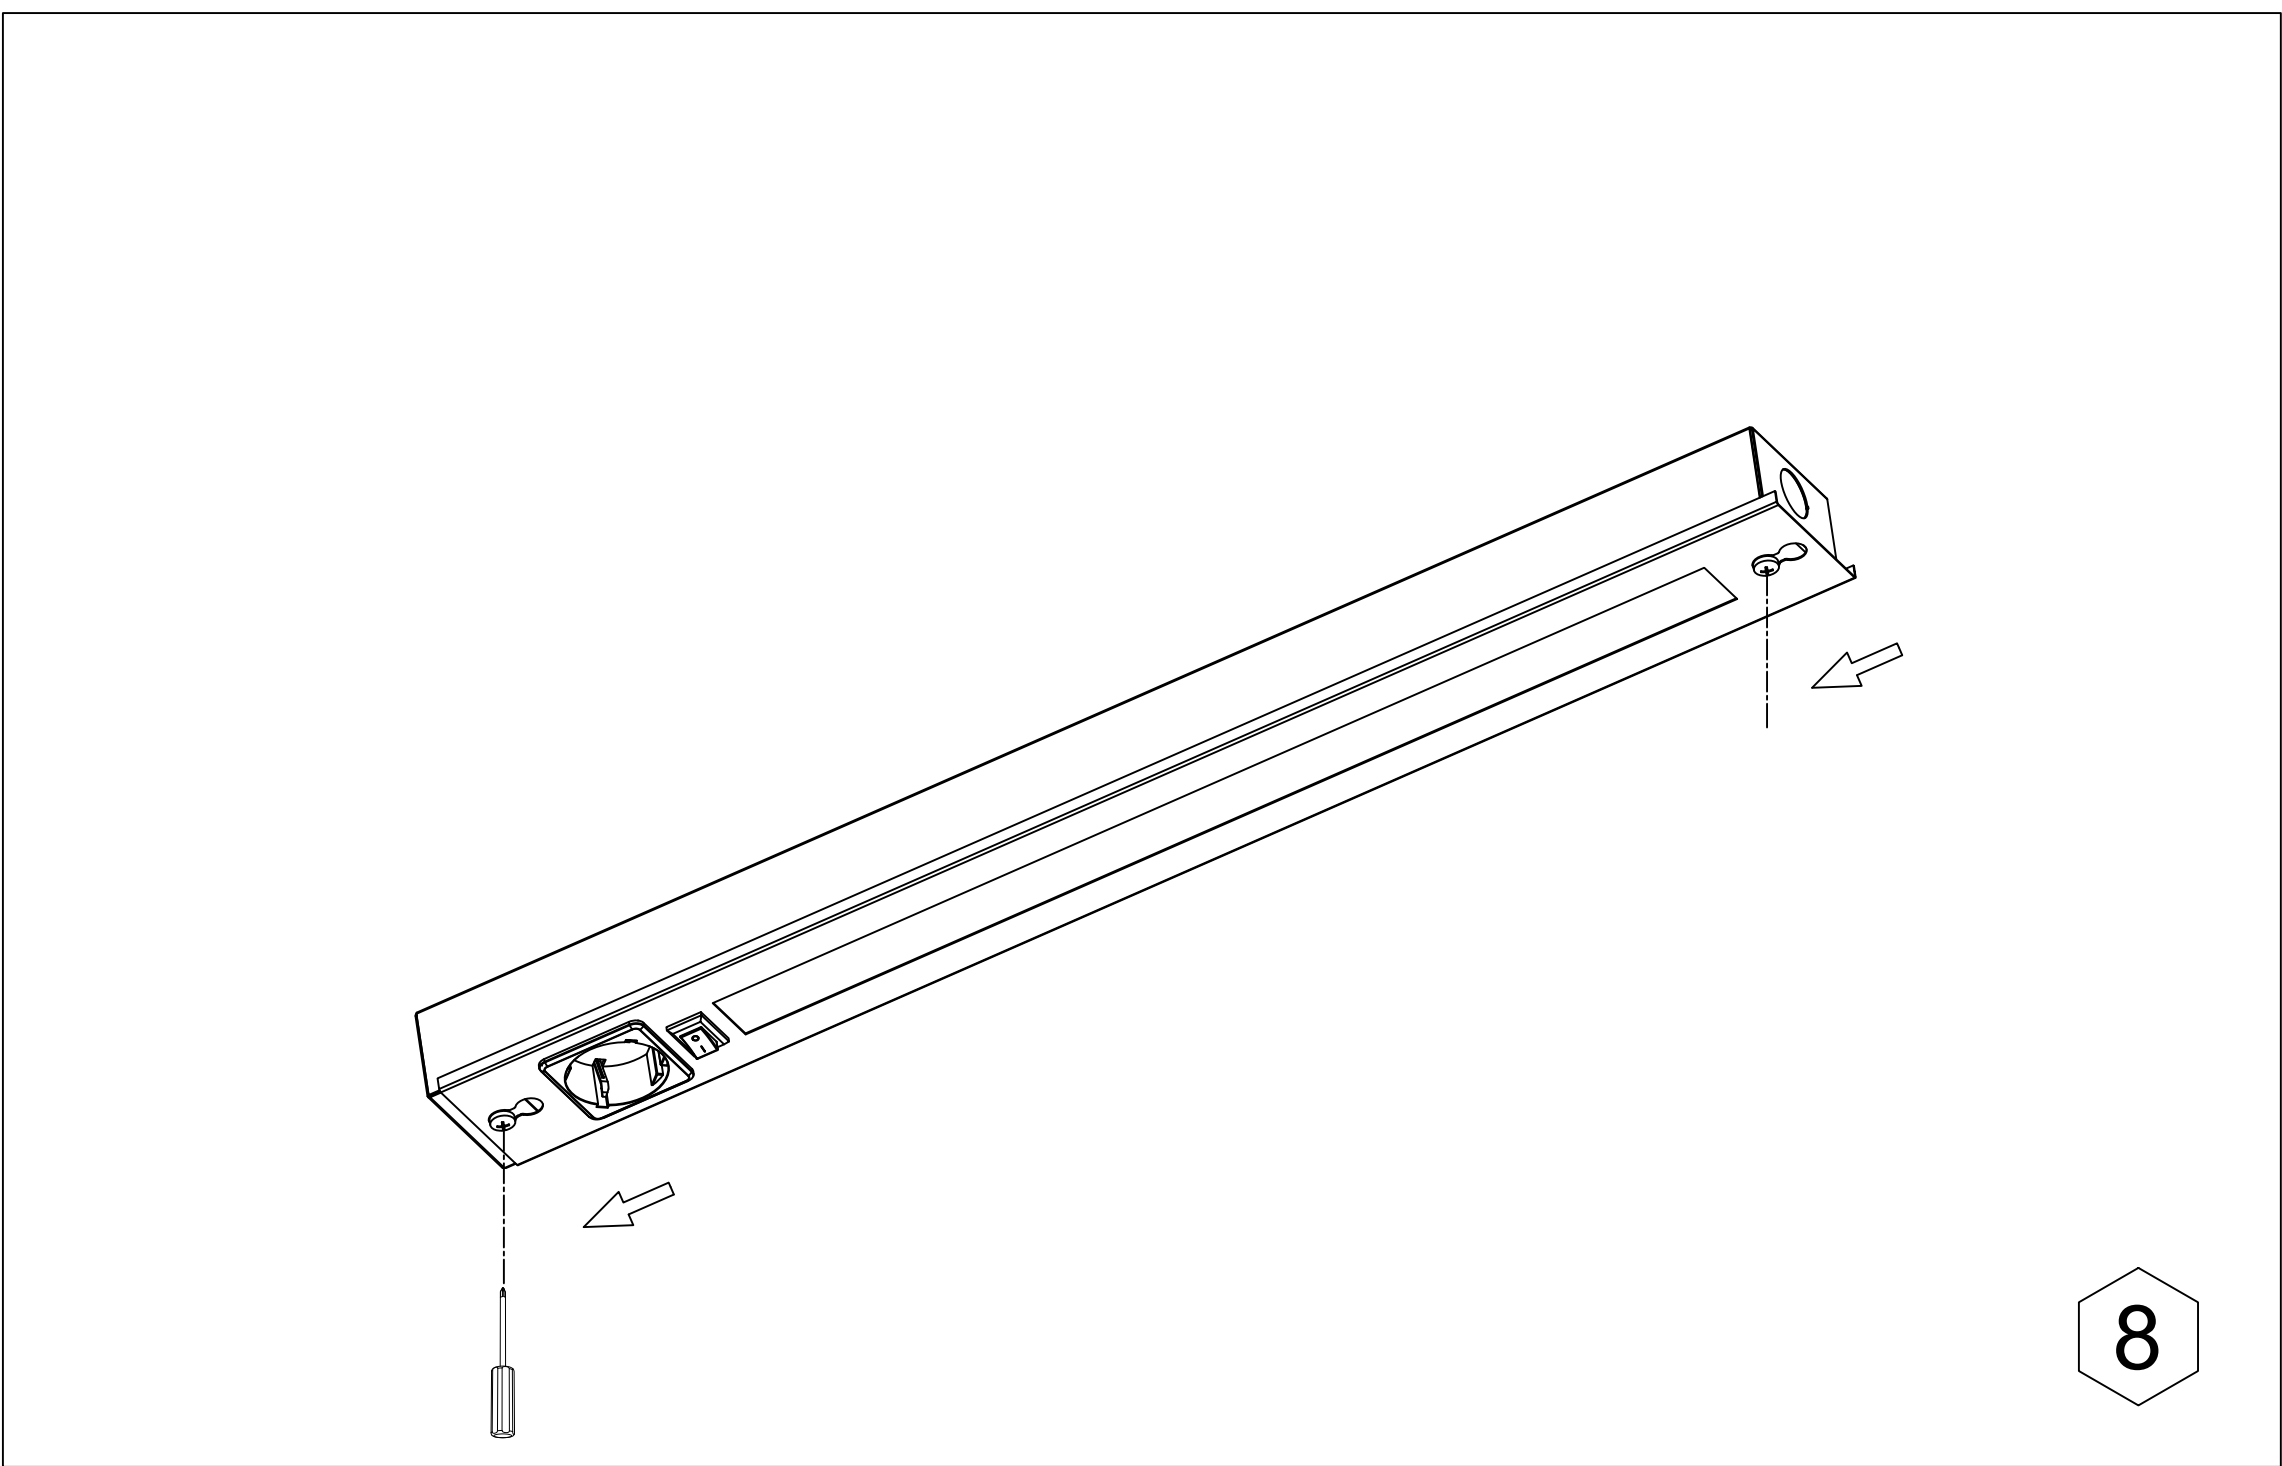

Push the lamp shade back to its original position and tighten the screws.

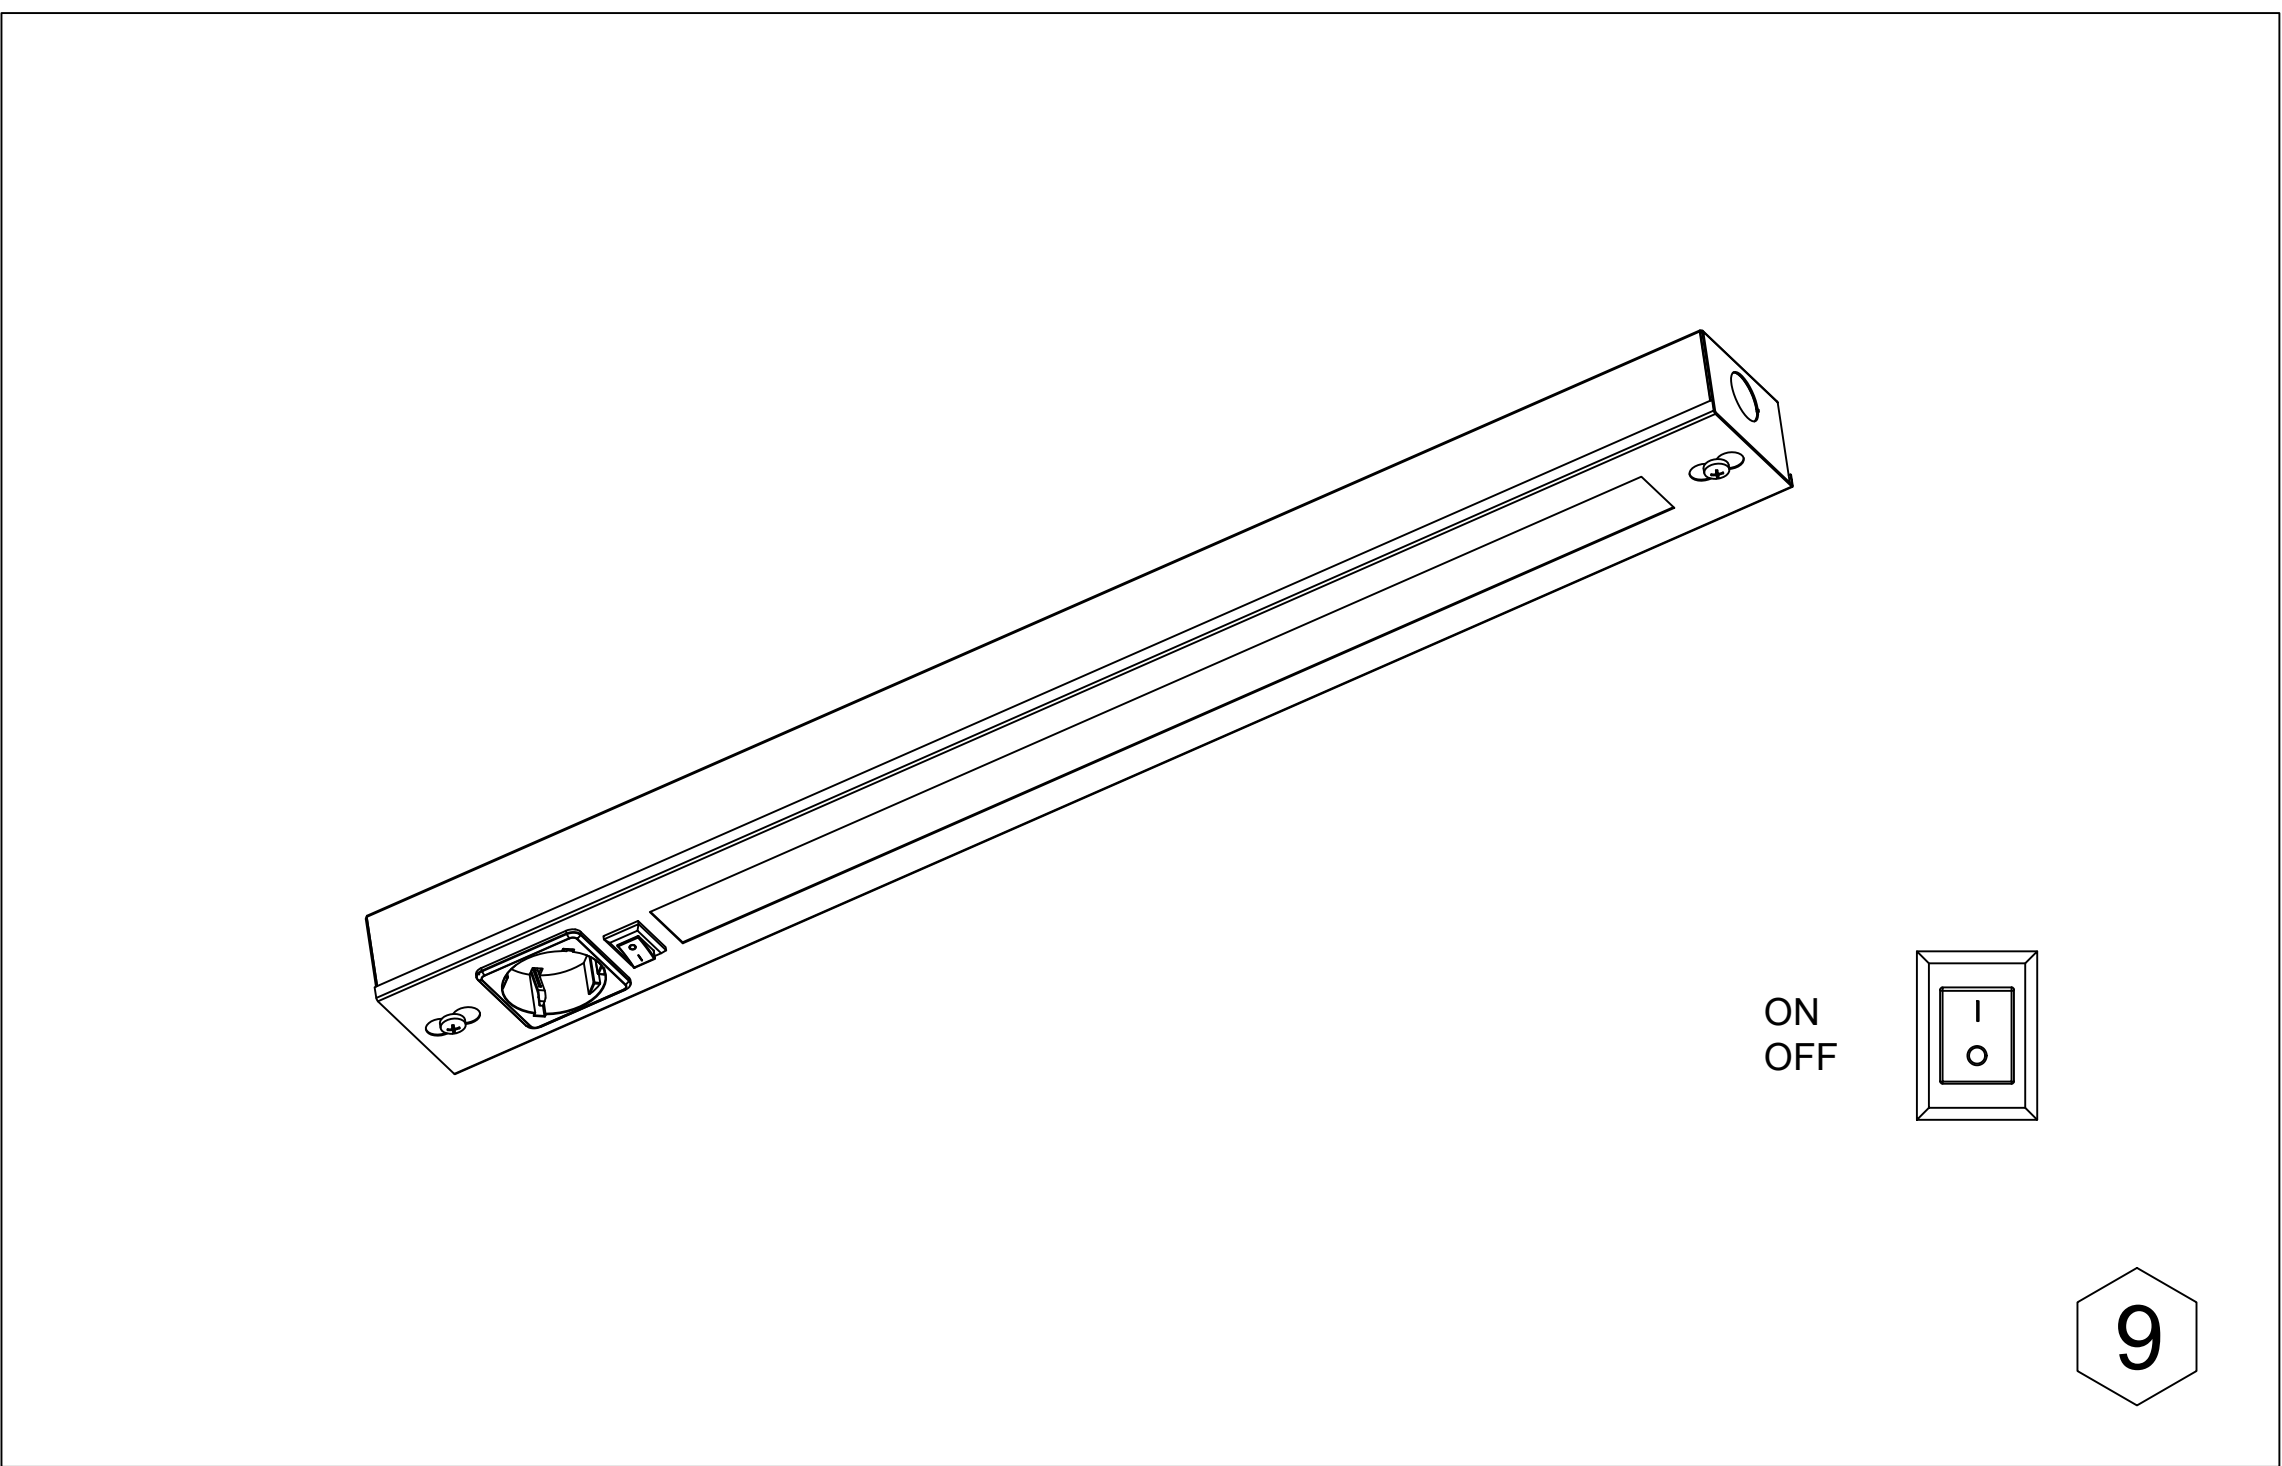

Finish the wiring.