
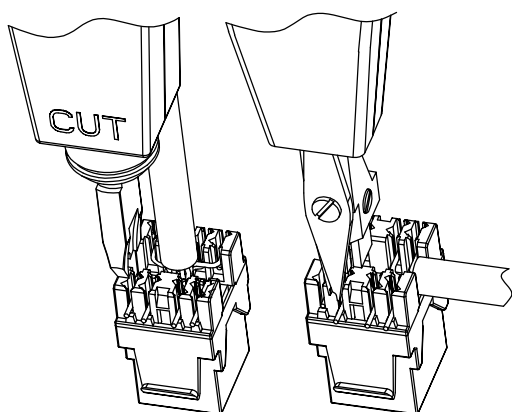




Angled Patch Panel For Keystone Jack

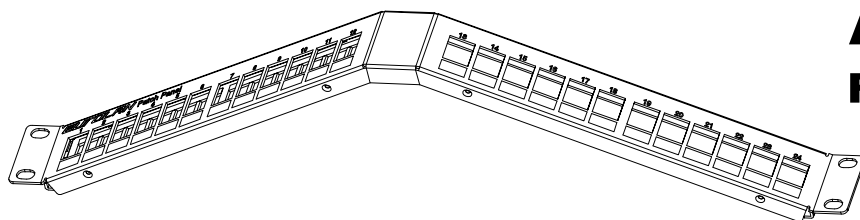

STEP 1:



Insert wires into IDC seat according to the wiring configuration (T568B/T568A). Terminate the wires with a punch tool, and trim off excess wires.

Grounding screw

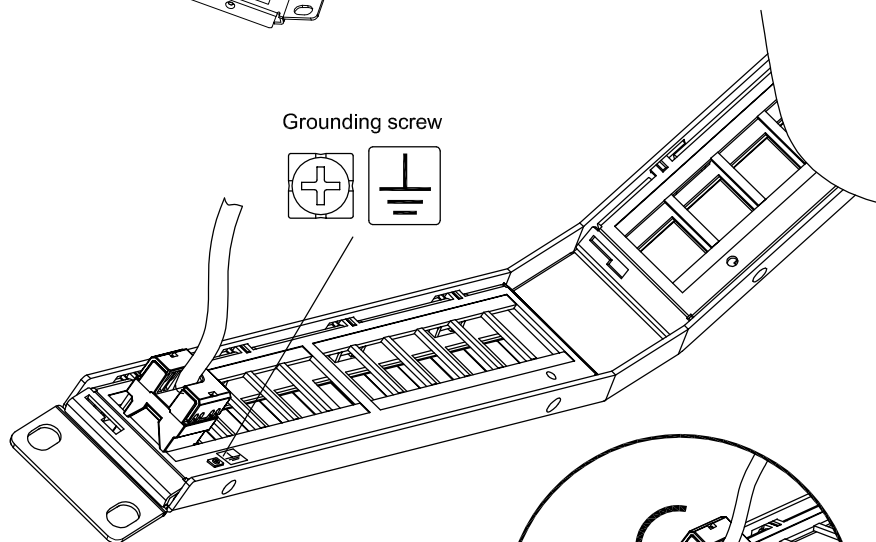


STEP 2:

Snap keystone jack into panel.

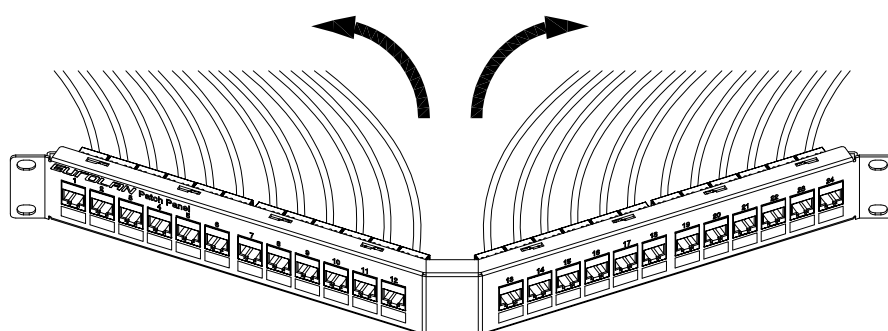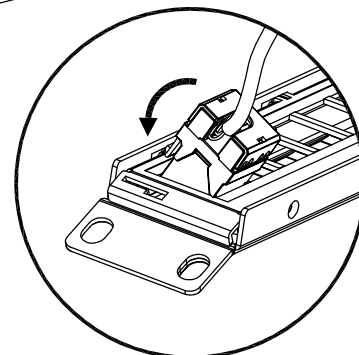

STEP 3:

Recommended cable routing in fan direction.

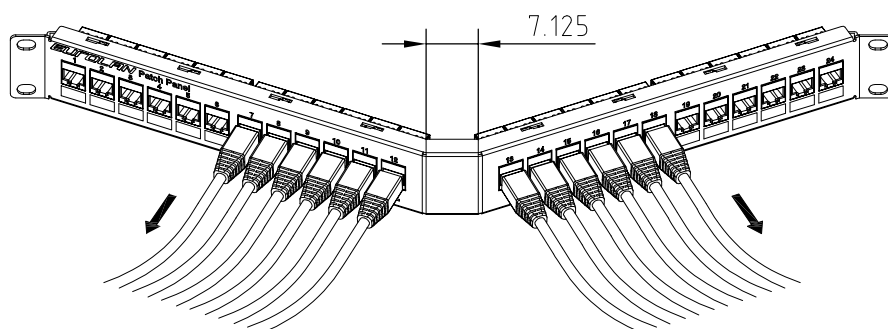

STEP 4:

Recommended routing for patch cords.